

Goblin 700 Manual

Goblin 700 Manual

Release 2.0 - June 2012

SAB HELI DIVISION S.R.L. Via San Crispino, 47 47030 San Mauro Pascoli (FC) - ITALY

New standard equipment for the Goblin 700

Life is an evolution, and as with life our helicopter changes. Not in a big way, but we feel these changes to the standard equipment included with the Goblin 700 will enhance your experience with the helicopter. The only mandatory upgrades for existing kit owners are the new 37T pulley (H0101-5), which has been available for some time, and the new shouldered M2.5x19 SHCS (HC033-5).

- tooth motor pulley fits better with the most popular motor Kv choices being made. Of course, there are still many other pulley tooth counts offered as optional parts to allow you to optimize your power setup. Please refer to page 28 of the manual for updated gear Originally, the Goblin was offered with a 22T motor pulley. After extensive testing we believe the gear ratio offered by using a 21 New 21T Motor Pulley (H0015-21-S) (Note: Refer to page 13 of the manual for detailed assembly information.) ratio information.
- **New 20T Drive Pinion (H0125-S) (Note**: Refer to page 11 of the manual for detailed assembly information.)

 This new drive pinion is now made from steel, which affords much improved wear characteristics.
- Extensive flight experience gained over the previous months has resulted in us making a small change to the 60T autorotation pulley. The changes made will help improve autorotation performance and ensure reliable operation of the one way bearing, even New 60T Pulley (H0104-S) (Note: Refer to page 11 of the manual for detailed assembly information.) after extended use. 03
- This new 37 tooth front tail drive pulley is now included in new kits in preference to the previous 36 tooth pulley. In addition to providing an increased tail drive ratio (which allows superb tail authority even at low head speeds), the pulley flanges are secured to the sprocket using SHCS. If you are still using the 36 tooth pulley with pressed on flanges, please contact the SAB New 37T Pulley (H0101-S) (Note: Refer to page 11 of the manual for detailed assembly information.) SAB HELL DIVIDION Goblin distributor in your country for a replacement. 8
- This new main shaft has been modified to accept our new locking collar (H0020-S, included) which features a M4 securing bolt. The change from a M3 to M4 securing bolt for this collar ensures locking collar integrity even during the harshest of conditions. New Main Shaft (H0122-S) (Note: Refer to page 11 of the manual for detailed assembly information.)
- **106 New M4 Locking Collar (H0121-5)** (**Note**: Refer to page 11 of the manual for detailed assembly information.) Available separately, this is the new main shaft locking collar utilizing a M4 size attachment bolt, which is included.

New Canopy Grommet-(HA111-S)

- This new tail pulley features a series of socket head cap screws which securely fasten the flanges to the pulley sprocket. While the original design was more than adequate, we realize that the permanent security offered by this new system will be appreciated by all. New Heavy Duty 27T Tail Pulley (H0102-S) (Note: Refer to page 19 of the manaul for detailed assembly information.) 07
- New Socket Head Cap Screw Shouldered M2.5x19 (HCO33-S) (Note: Refer to page 11 of the manual for detailed assembly information.)
 These new shouldered SHCS offer a large increase in strength compared to the original fully threaded bolts. If you are still using the original fully threaded bolts, please contact the SAB Goblin distributor in your country for replacements.
- Our new yellow landing gear is both aesthetically pleasing and functional. It will give your Goblin even more of a sports car look and fell. Manufactured from high quality carbon fiber, the color matches the stock canopy paint scheme. These will look great on your model. New Yellow Landing Gear (H0105-S) (Note: Refer to page 8 of the manual for detailed assembly information.)

SAB HEL DIMISION





SAB HELI DIVISION


INDEX

- 1 Introduction
- 2 Important notes
- 3 Components and Box
- 4 Carbon frame assembly
- 5 Trasmission module
- 6 Main rotor

- 7 Tail assembly
- 8 Assembling the modules
- 9 Installation of swashplate servos
- 10 Installation of the ESC
- 11 Installation of Flybarless unit and RX
- 12 Installation of the motor

- 13 Installation of the boom
- 14 Battery and Canopy
- 15 In flight 🛕
- 16 Maintenance 17 – Exploded views
- 18 Spare parts



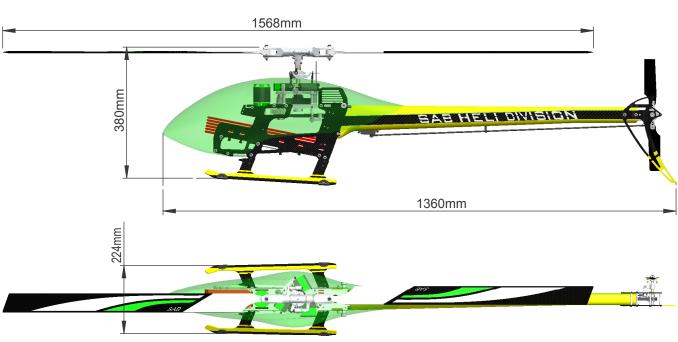

Main rotor diameter: 1568mm (with 690mm blades)

Main blade length: 690 to 710mm Tail rotor diameter: 296mm Tail blade length: 115mm Main shaft diameter: 12mm Tail shaft diameter: 6mm Spindle diameter: 10mm

Weight including standard electronics: 3290g (excluding batteries). Motor size: Maximum 64mm diameter, maximum height 64mm Battery compartment: 60x58x350mm (adaptable to 64x58x350mm)

SAB HELI DIMISION -

The Goblin is a high performance radio controlled helicopter.

The design is original, moving away from traditional schemes, searching rationality for simplicity.

Our goal was to create a simple, high performance helicopter, with a minimum of mechanical components, and simple maintenance.

Please read this user manual carefully, it contains instructions for the correct assembly of the model.

Please refer to the web site www.goblin-helicopter.com for updates and other important information.

Thank you for your purchase, and have a great time with your Goblin!

SAB Heli Division.



IMPORTANT NOTES

- *This radio controlled helicopter is not a toy.
- *This radio controlled helicopter can be very dangerous.
- *This radio controlled helicopter is a technically complex device which has to be built and handled very carefully.
- *This radio controlled helicopter must be built following these instructions. This manual provides the necessary information to correctly assemble the model. It is necessary to carefully follow all the instructions.
- *Inexperienced pilots must be monitored by expert pilots.
- *All operators must wear safety glasses and take appropriate safety precautions.
- *A radio controlled helicopter must only be used in open spaces without obstacles, and far enough from people to minimize the possibility of accidents or of injury to property or persons.
- *A radio controlled helicopter can behave in an unexpected manner, causing loss of control of the model, making it very dangerous.
- *Lack of care with assembly or maintenance can result in an unreliable and dangerous model.
- *Neither SAB Heli Division nor its agents have any control over the assembly, maintenance and use of this product.

 Therefore, no responsibility can be traced back to the manufacturer. You hereby agree to release SAB Heli Division from any responsibility or liability arising from the use of this product.

SAFETY GUIDELINES

- *Fly only in areas dedicated to the use of model helicopters.
- *Follow all control procedures for the radio frequency system.
- *It is necessary that you know your radio system well. Check all functions of the transmitter before every flight.
- *The blades of the model rotate at a very high speed; be aware of the danger they pose and the damage they may cause.
- *Never fly in the vicinity of other people.

NOTES FOR ASSEMBLY

Please refer to this manual for assembly instructions for this model.

Follow the order of assembly indicated. The instructions are divided into chapters, which are structured in a way that each step is based on the work done in the previous step. Changing the order of assembly may result in additional or unnecessary steps.

Use thread lockers and retaining compounds as indicated. In general, each bolt or screw that engages with a metal part requires thread lock.

Factory pre-assembled components have been assembled with all the required thread lock and lubricants, and have passed quality control. It is not necessary to disassemble and re-assemble them.

It is necessary to pay attention to the symbols listed below:



Important





Use CA Glue







Indicates that for this assembly phase you need materials that are in box xx, bag xx, tray xx.



ADDITIONAL COMPONENTS REQUIRED

*Electric Motor:

10S-12S - 400-600Kv

Maximum diameter 64mm,

Maximum height 64mm, pinion shaft diameter 6mm

*Speed controller:

minimum 120A to be safe

*Batteries: 10-12S 4000-5000mAh

*1 flybarless 3 axis control unit

*Radio power system, if not integrated with the ESC

*3 cyclic servos

*1 tail rotor servo

*6 channel radio control system on 2.4 GHz

(See configuration examples on page 28)

TOOLS, LUBRICANTS, ADHESIVES

*Generic pliers

*Hexagonal driver, size 1.5,2,2.5,3,4mm

*4mm T-Wrench

*5.5mm Socket wrench (for M3 nuts)

*8mm Hex fork wrench (for M5 nuts)

*Medium threadlocker (eg. Loctite 243)

*Strong retaining compound (eg. Loctite 648)

*Spray lubricant (eg. Try-Flow Oil)

*Synthetic grease (eg. Tri-Flow Synthetic Grease)

*Cyanoacrylate adhesive

*Pitch Gauge (for set-up)

*Soldering equipment (for motor wiring)

Inside the main box there are:



Inside the main box:

Box 2: Canopy, Blade Holder.

Box 3: Boom, Blades, Tail blades, Carbon rod.

Box 4: Mechanical parts in 4 trays:

Tray 1: Main rotor

Tray 2: Carbon frame and tail rotor


Tray 3: Transmission

Tray 4: Main structure

Box 5: Bags

Box 6: Carbon parts


Box 7: Combo Kit (optional)

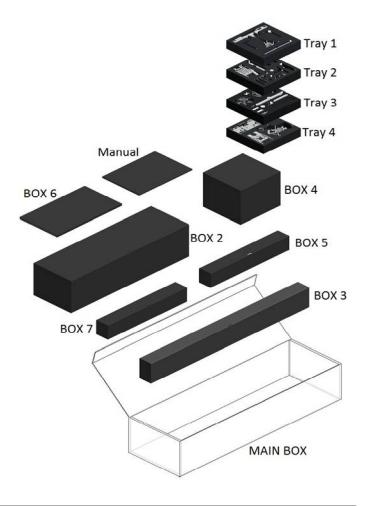



The assembly process is described in the following chapters of this manual. Each phase begins with a green frame which gives the box, the bag with screws (and miscellaneous items), and the foam tray with the components required for the phase.






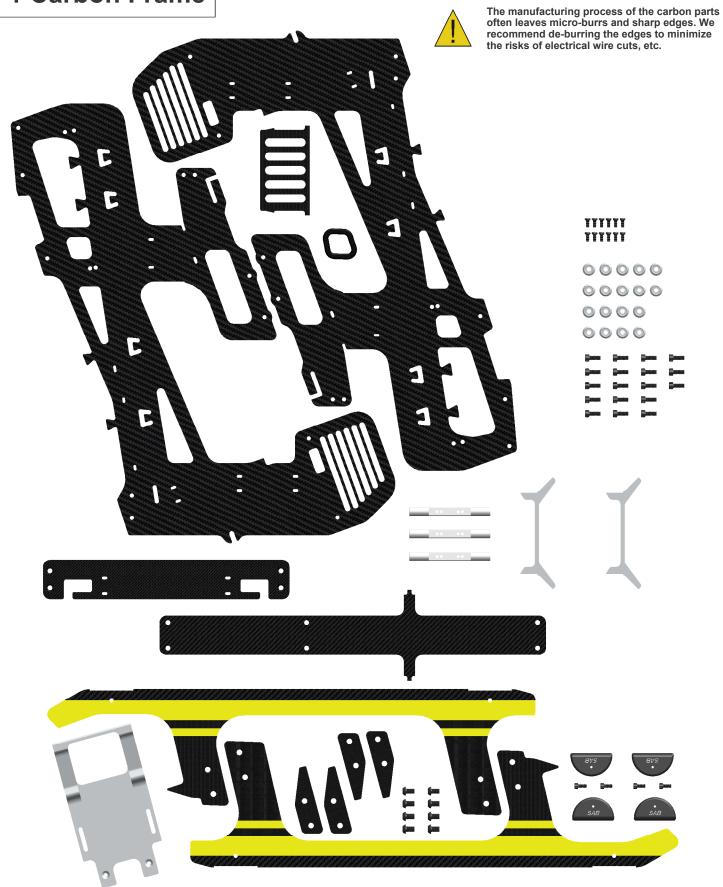


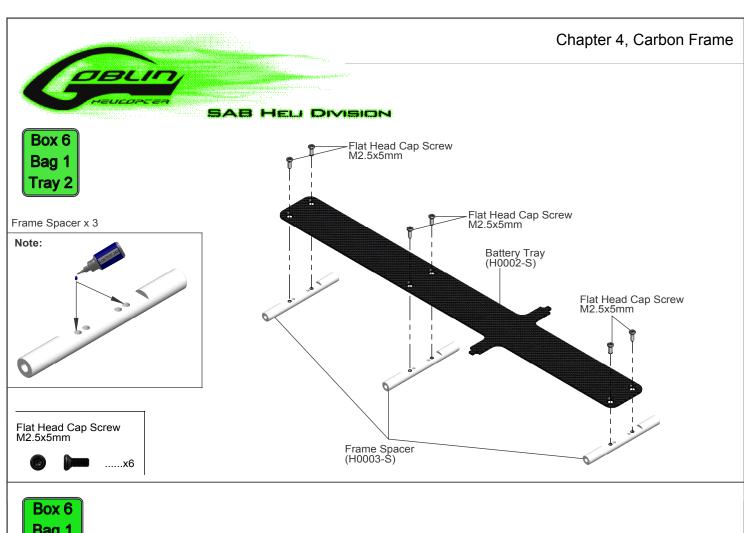


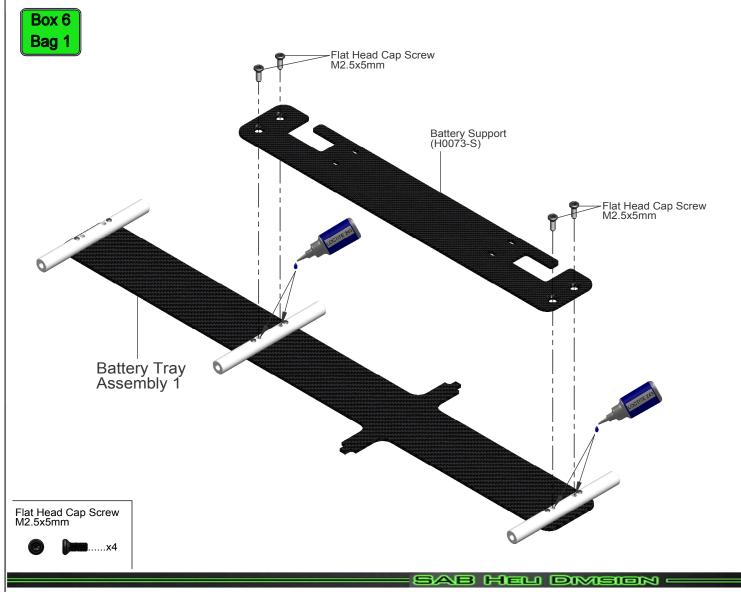


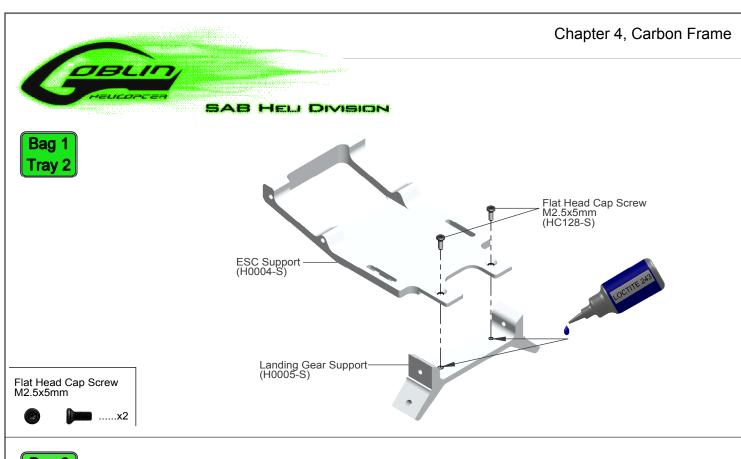



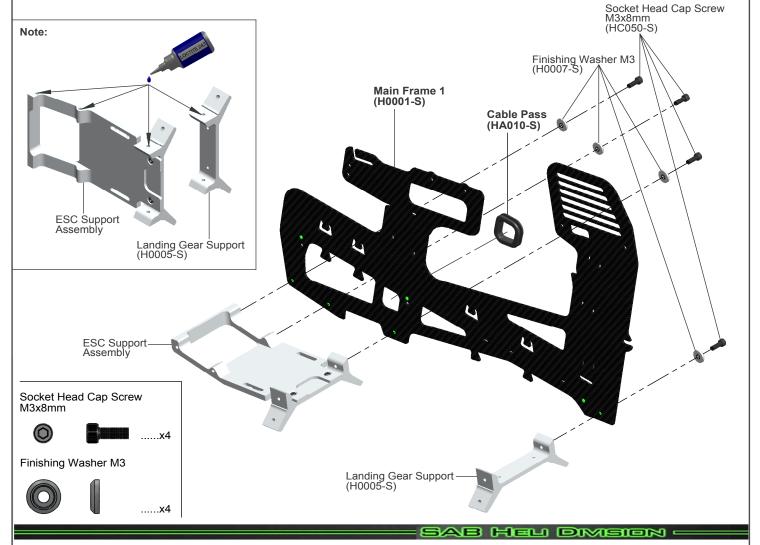


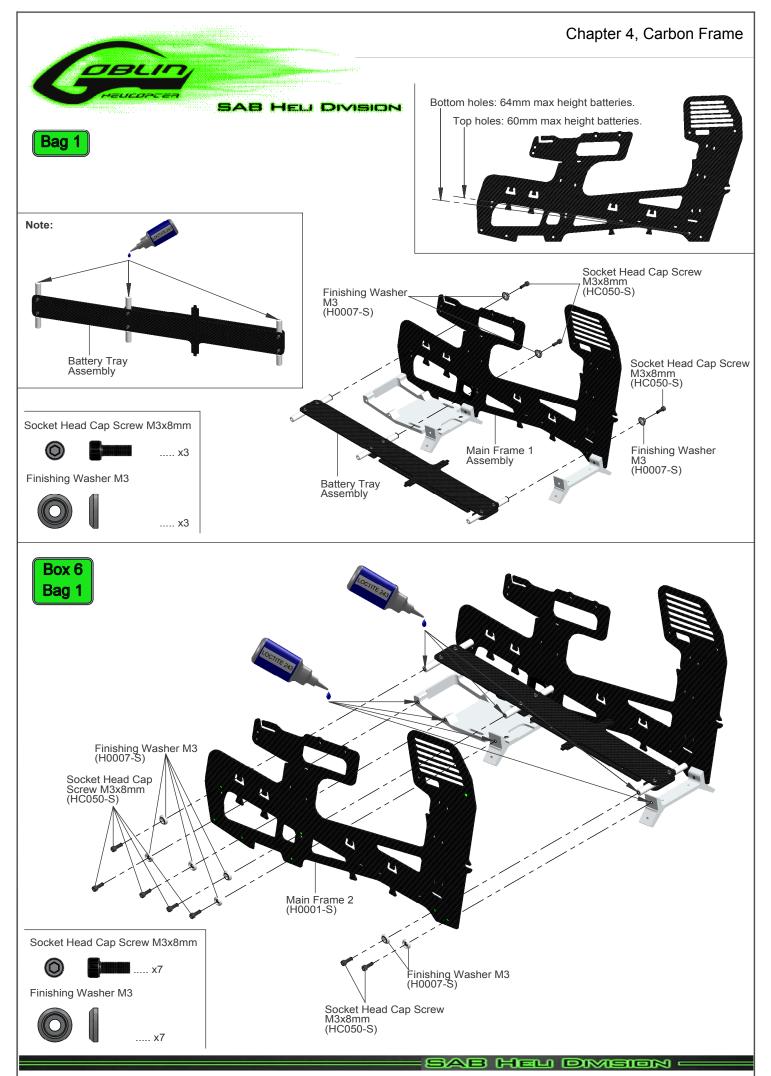


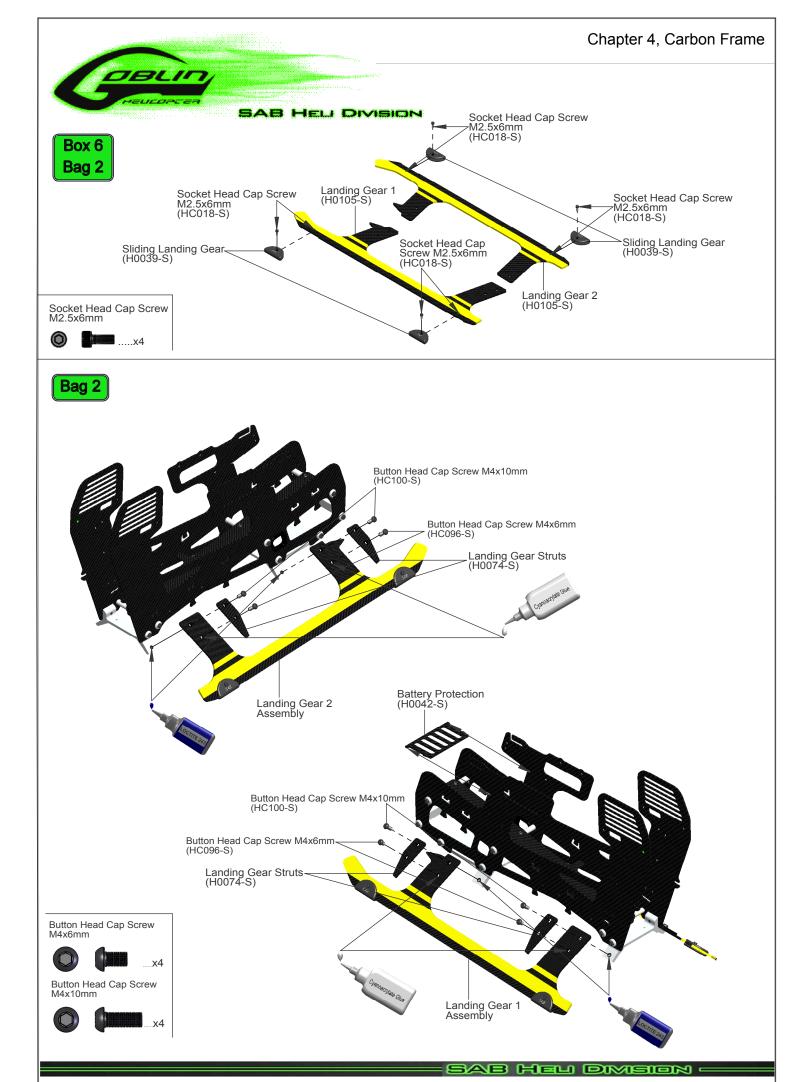






5 - Transmission Assembly

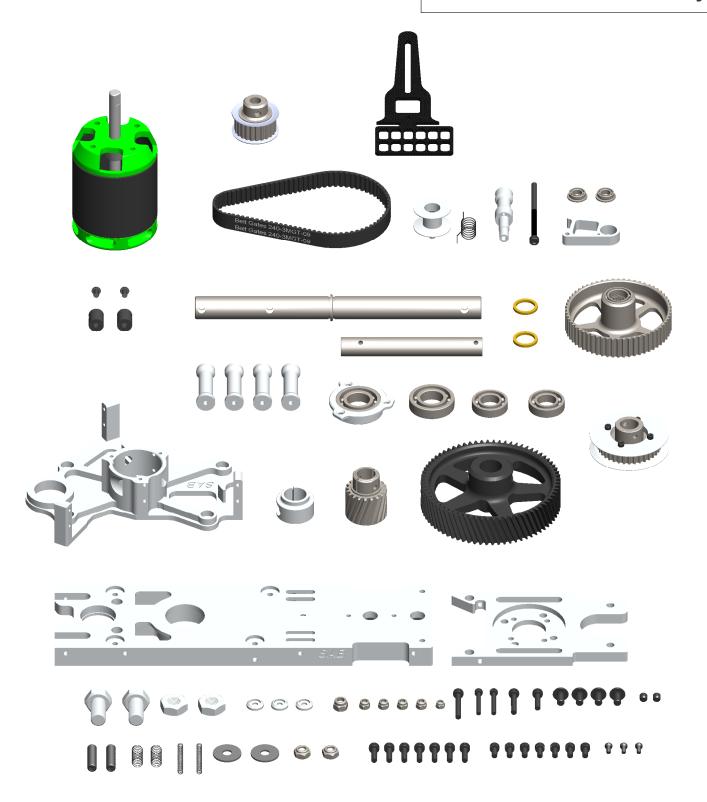


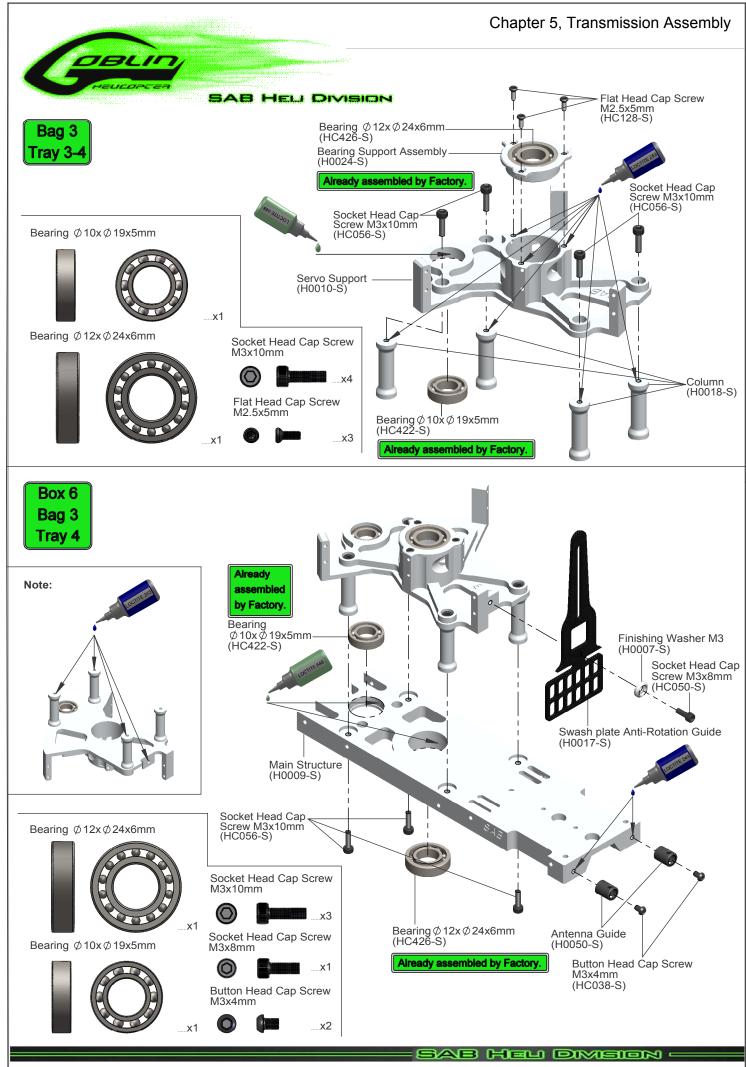

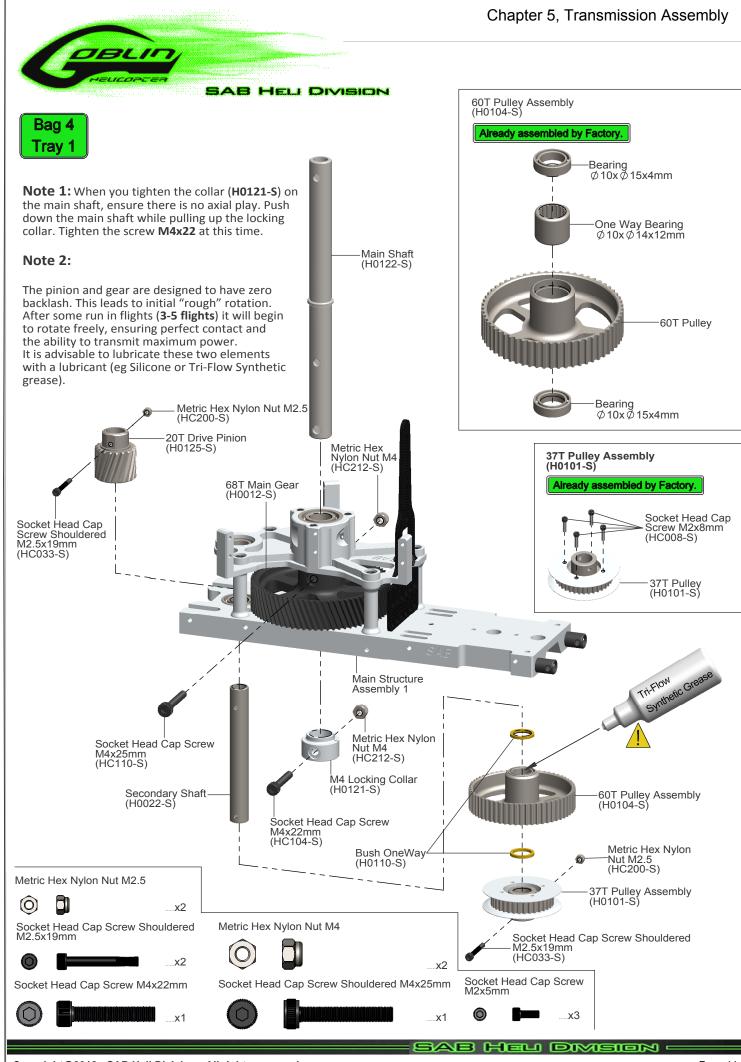

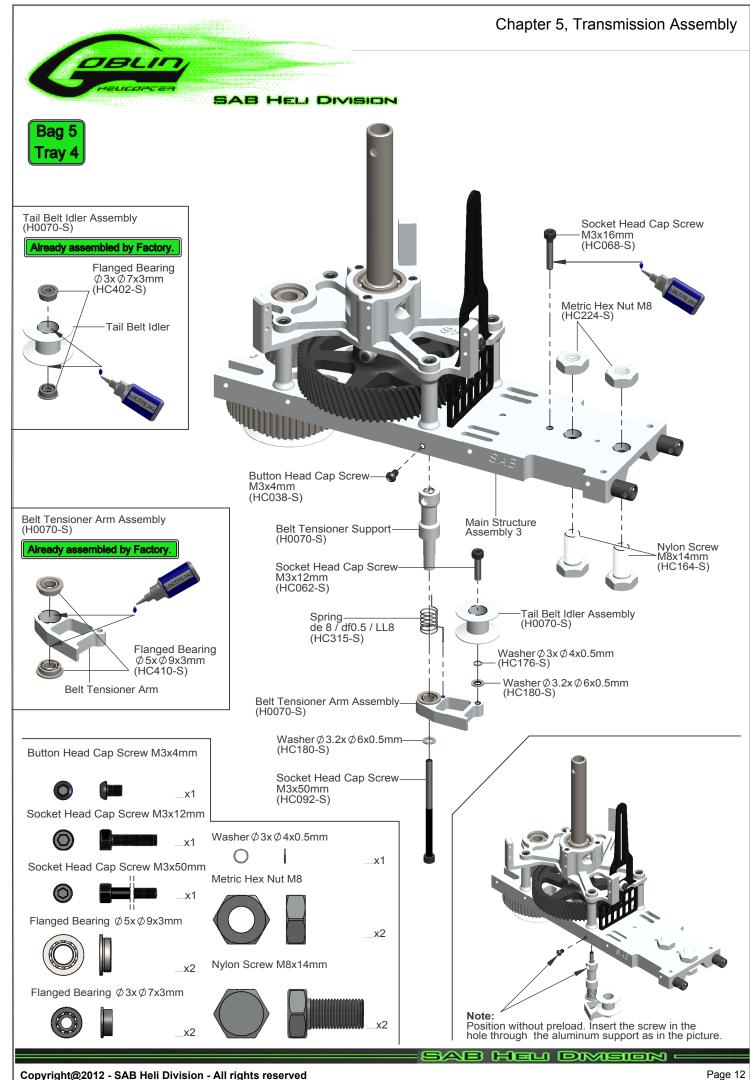

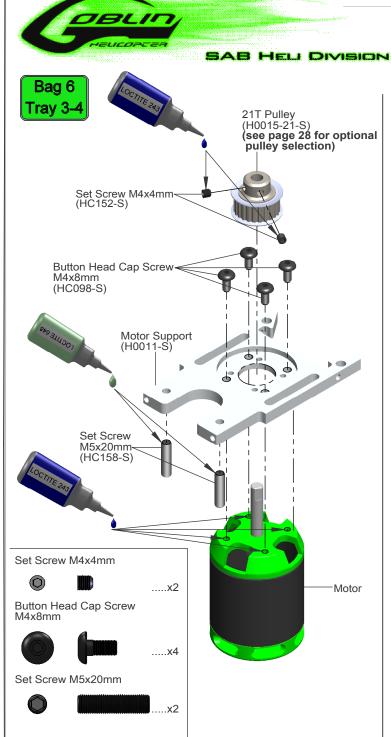

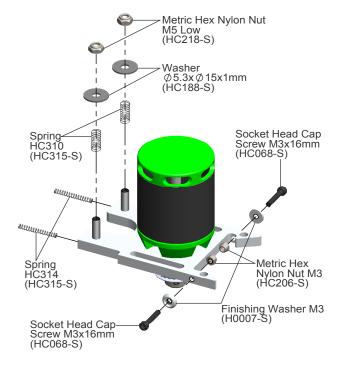




Note:

To maximize space for the batteries, it is advisable to shorten the motor shaft.


Follow the dimensions given in this drawing. For the cut, you can use an electric tool like a "Dremel" with a cut-off disc.

Additionally, ensure the motor shaft has an appropriate 'flat' for one of the set screws.

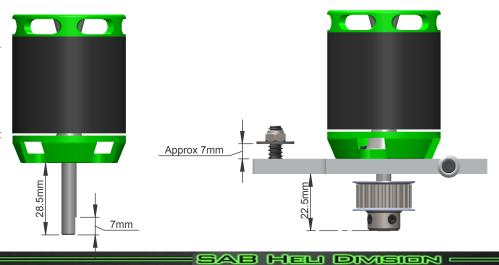



6 - Main Rotor

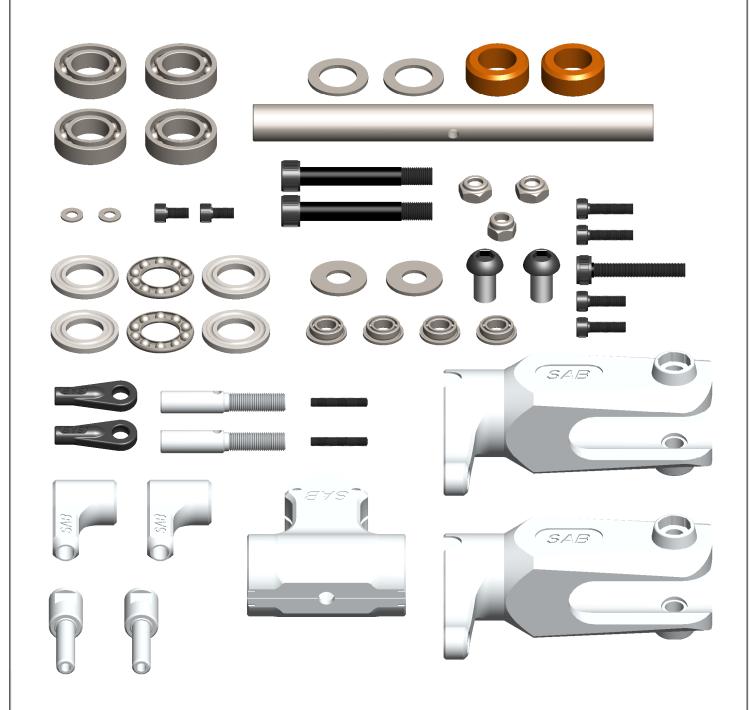

Uniball M3x4 Ø 5H3 (H065-S) Already assembled by Factory.

SAB HELI DIMISION



7-Boom and Tail







SAB HELI DIVISION




Already assembled by Factory.


Bearing Ø5x Ø9x3mm







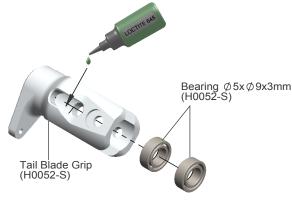




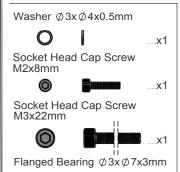


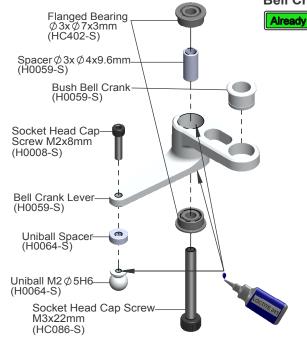


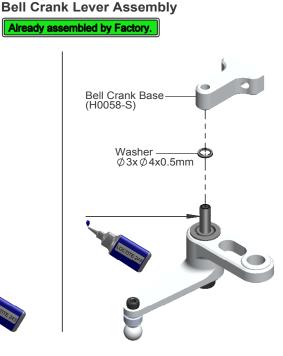

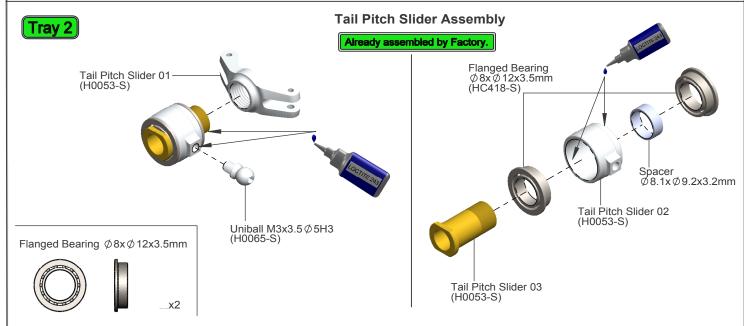


x2

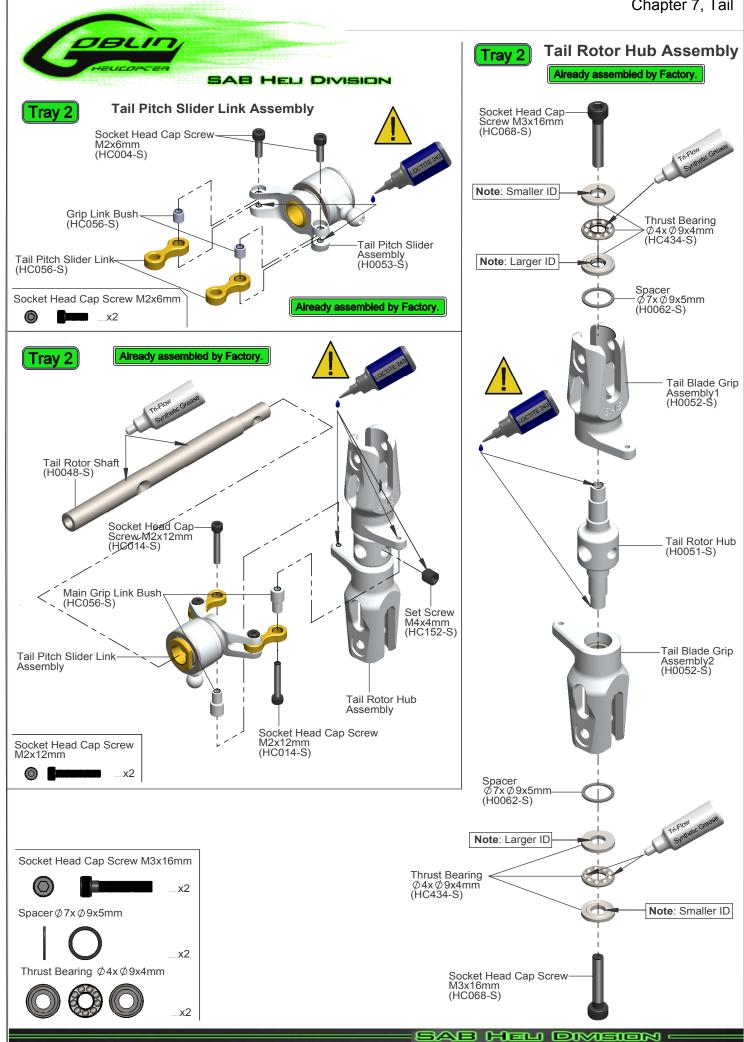

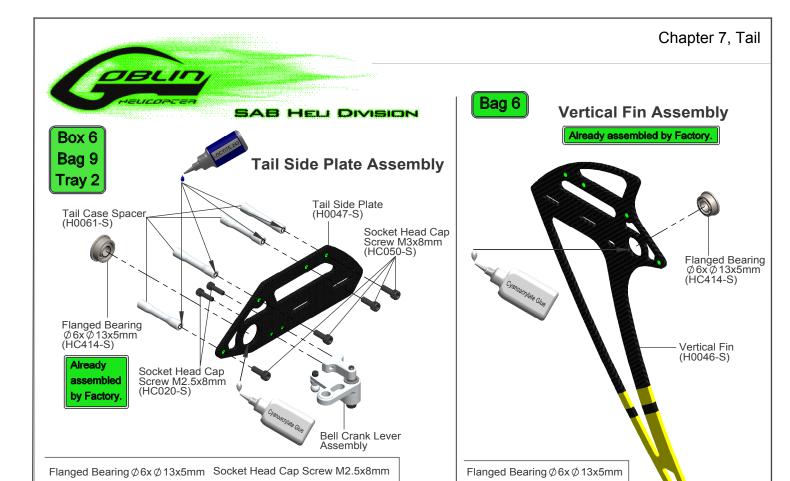

_x2

Socket Head Cap Screw M3x8mm

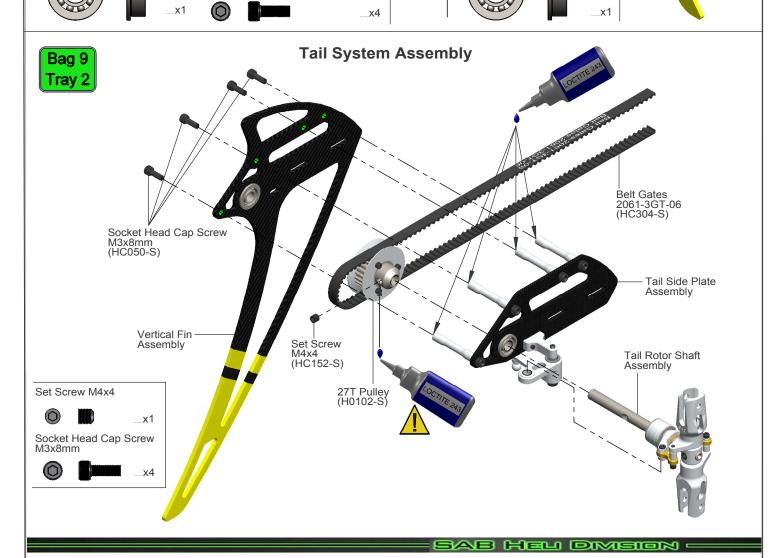




SAB HELI DIVISION

If you want to see a video of this operation, consult the SAB Heli Division YouTube channel.



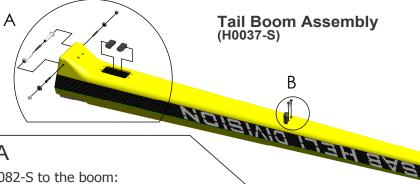

Tail Boom Assembly (H0037-S)

В

DETAIL A


Attaching H0082-S to the boom:


Pre-assemble the two boom spacers H0082-S with the M3x20 socket set screw.

Insert into the boom tube completely done up.

Center the holes, then unscrew until there is contact with the walls

Lock everything with the adhesive.

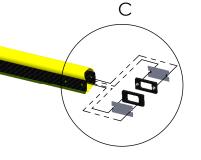

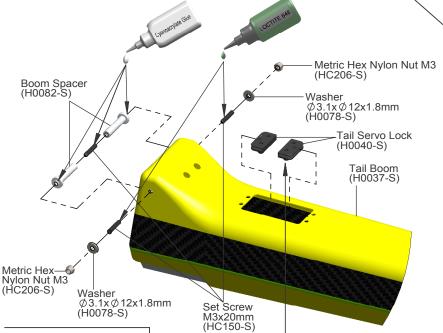

Set Screw M3x20mm



Metric Hex Nylon Nut M3








Assemble H0040-S in the boom

Before assembling the two parts in the boom we suggest tightening the M2.5 screws into the two plastic parts to pre-thread them. In this way when you will assemble the tail servo it will be easier to tighten the screws into the plastic parts. Check the tail servo can fit, if necessary carefully sand the hole.

DETAIL B

Assemble H0045-S in the boom

Before mounting H0045 on the boom we suggest to first tighten the M2.5 screws into the holes to thread them. In this way when you assemble the part it will be easier to tighten the screws.

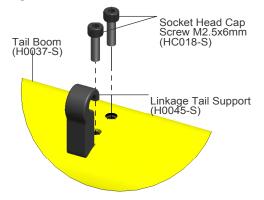

Socket Head Cap Screw M2.5x6mm











Locking Element Tail Assembly X 2

Already assembled by Factory.

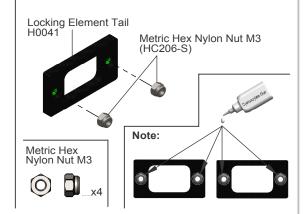

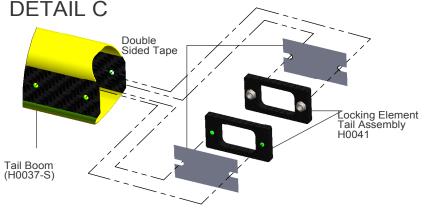


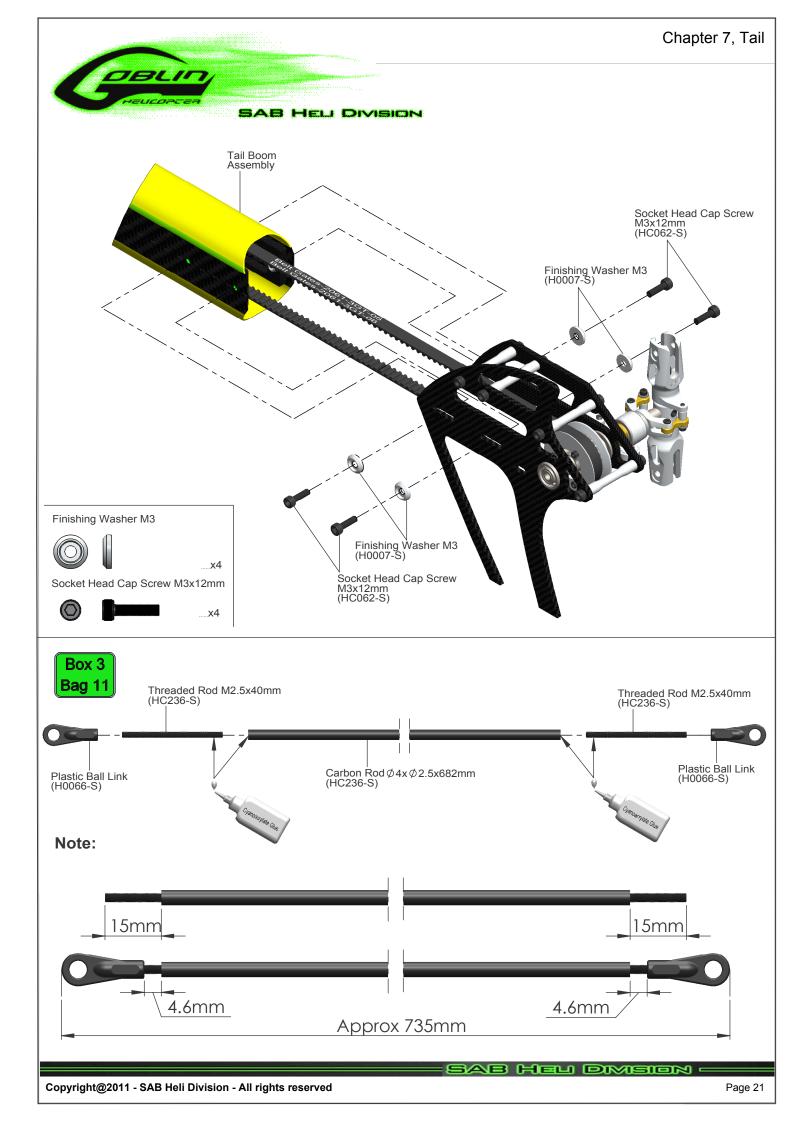


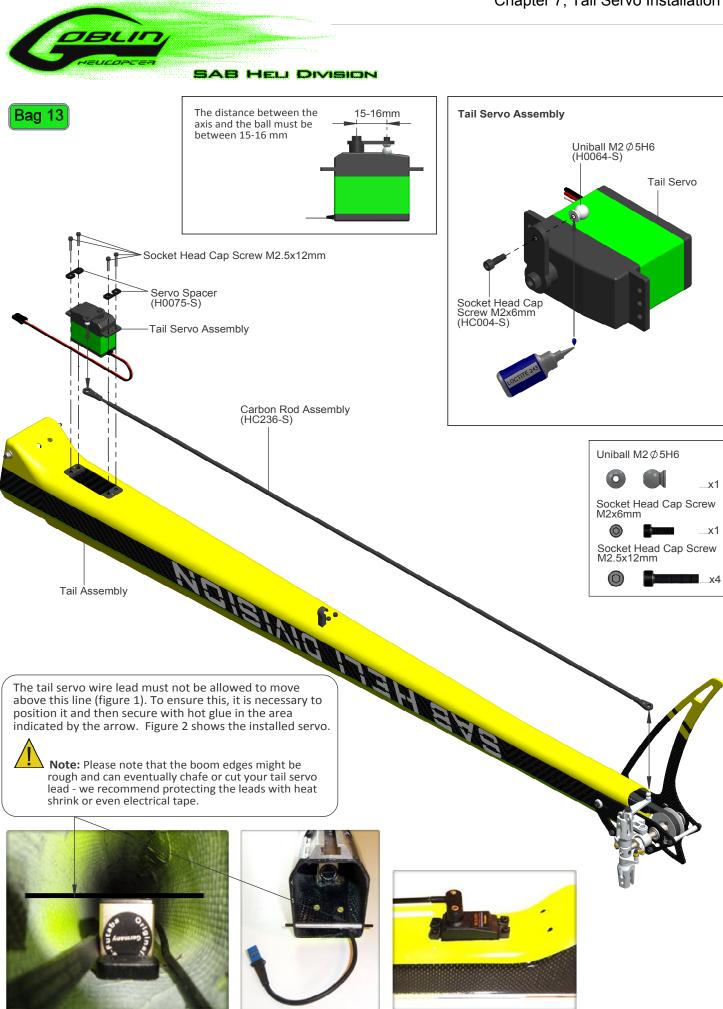

SAB HELI DIVISION



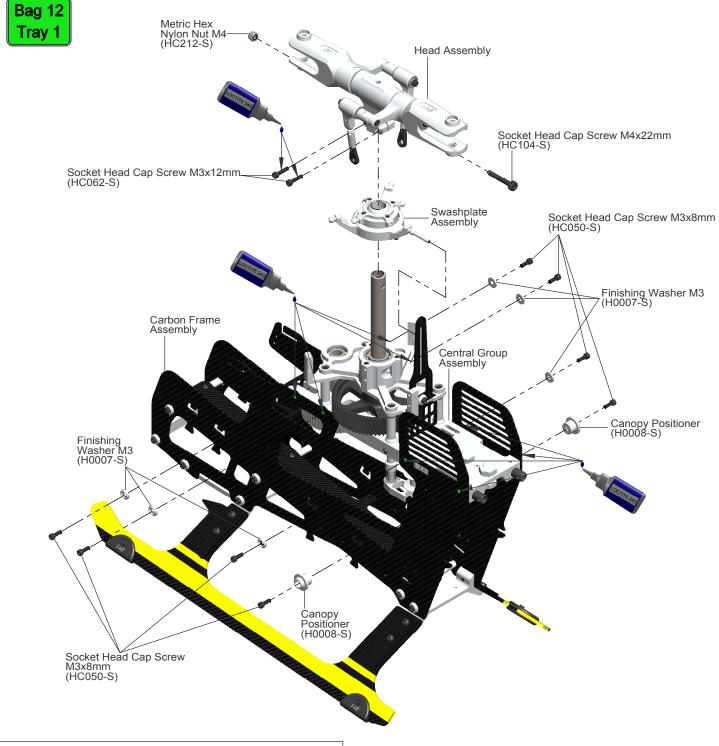


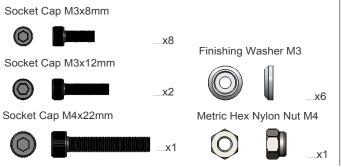





INSTALLATION OF SWASHPLATE SERVOS

The linkage ball must be positioned between **16-18 mm** out on the servo arm (**figure 1**). The 120° placement of the servos inside Goblin means the arms are difficult to access. For this reason it is advisable to ensure alignment of the servo arms (and sub trim set) before installation of the servos in the model (**figure 2**). Proceed with installation following the instructions below. **Figure 3** shows a completed installation.

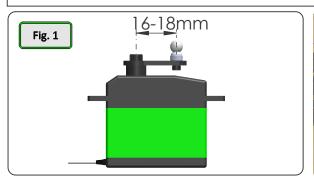


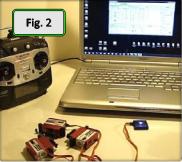


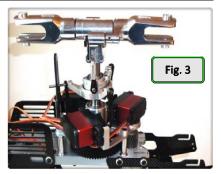


Assembly of the Ball on the Horn.

The rods going from the servos to the swash plate must be as vertical as possible. Not all servos are equal, so to better align them you can choose to use the supplied spacer H0031. Figure 4 illustrates this.

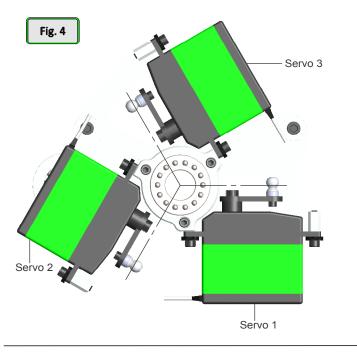

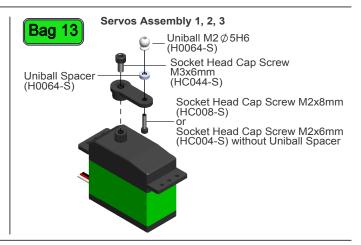

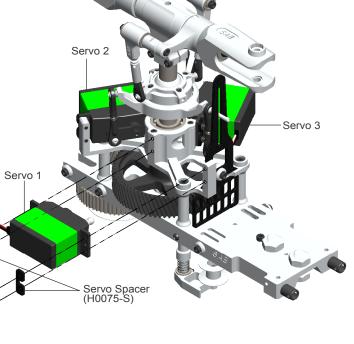

Socket Head Cap Screw M2.5x8mm

Bag 13

M2.5x12mm






Socket Head Cap-Screw M2.5x8mm (HC020-S)


> Socket Head Cap Screw M2.5x12mm

(HC026-S)





The wire for the front servo must be positioned here.

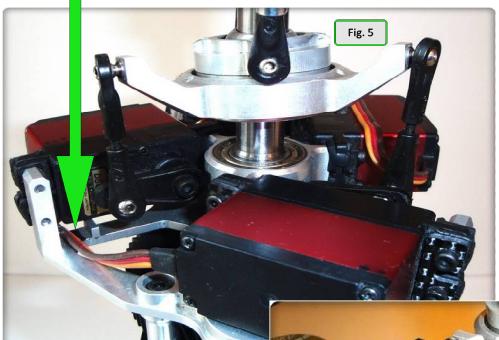

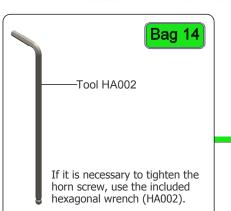



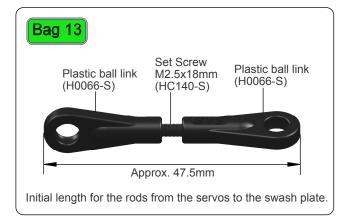

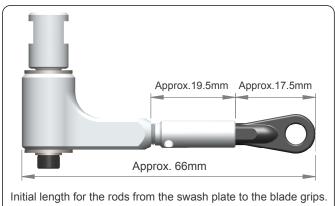



DE-BURR THE SIDE FRAMES





ESC INSTALLATION


The electronic speed control (ESC) is installed in the front part of the helicopter. The support is made of aluminum, which further acts as a heat sink for the ESC. The figures below show the installation of three different brands of ESC.









- **Figure 4**: Shows the wiring which connects the receiver and ESC (in this picture one frame has been removed). If the BEC used is combined with the ESC, it is recommended to use a dual wire connection.
- **Figure 5**: The passage of the controller wires to the motor is highlighted.
- **Figure 6**: Shows the installation of a 2S battery for the flight control system. Alternatively, a BEC could be placed in the same area.

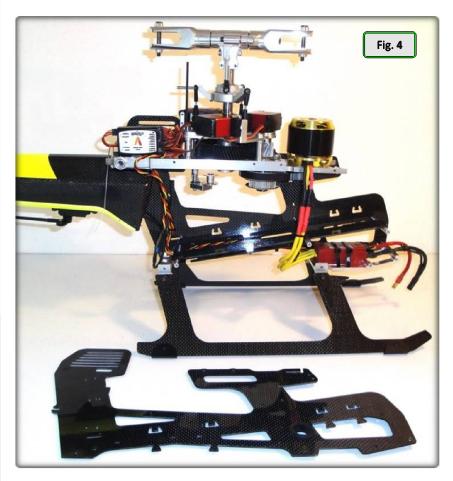

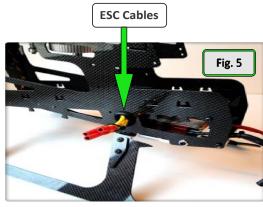

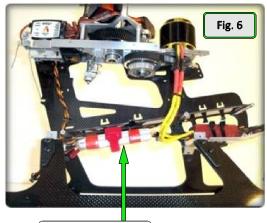

2S Battery or BEC




FLYBARLESS CONTROL UNIT AND RX INSTALLATION

It is possible to install any commercially available Flybarless control unit in the goblin. For Flybarless systems with a separate sensor, the sensor must be installed under the plate (**Figure 1**).

Figure 2 shows an example of installation of the receiver and flybarless control unit.


In Figure 3 you can see the extension lead for the tail servo. It is very important to include a connector for fast disassembly of the boom module. The connector will prevent servo damage in case of boom separation during a crash.

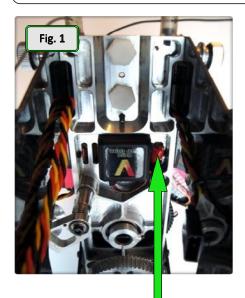

Slot for sensor cable




It is important to lock the plugs of the flybarless unit with an adhesive - for example hot glue.

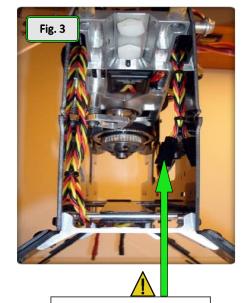

Tail servo extension cable

To install a one piece Flybarless system it is necessary to add the support shown in these figures. Figure 3 shows the installed support. Figure 4 shows the control unit and the receiver installed on the support.

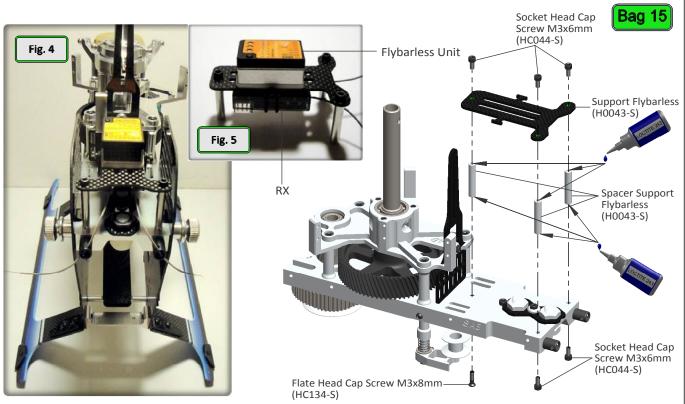



TRANSMISSION SETUP

It is important to choose the right reduction ratio to maximize efficiency based on your required flight performance. The Goblin has many possible reduction ratios at your disposal. It is possible to optimize any motor and battery combination. It is recommended to use wiring and connectors appropriate for the currents generated in a helicopter of this class.

If you are using a head speed calculator which requires a main gear and pinion tooth count, use **204** teeth for the main gear (this takes into account the two stage reduction) and the tooth count of your pulley as the pinion count.

Below is a list of available reduction ratios:

H0015-18-S - 18T Pir	nion = ratio 11.3:1	H0015-22-S - 22T	Pinion = ratio 9.3:1
H0015-19-S - 19T Pin	nion = ratio 10.7:1	H0015-23-S - 23T	Pinion = ratio 8.9:1
H0015-20-S - 20T Pin	nion = ratio 10.2:1	H0015-24-S - 24T	Pinion = ratio 8.5:1
H0015-21-S - 21T Pin	nion = ratio 9.7:1	H0015-26-S - 26T	Pinion = ratio 7.8:1

Some example configurations:

GOBLIN 700 CONFIGURATIONS										
Rev 01										
Performance	Battery	Motor	ESC	Pinion	Gov	RPM	Pitch			
GENERAL	12S 4000/5000 min 30C	Scorpion HK 4035-560	Ice 120 HV V2	21T	Set Rpm	2050	± 12.5			
			Jive 80 HV	19T	Yes @80%	2050	± 12.5			
		Kontronik Pyro 700-520	Ice 120 HV V2	22T	Set Rpm	2050	± 12.5			
			Jive 80 HV	20T	Yes @80%	2050	± 12.5			
3D	12S 4000/5000 min 45C	Scorpion HK 5025-440	Ice 120 HV V2	26T	Set Rpm	2120	± 12.5			
			Jive 120 HV	24T	Yes @80%	2120	± 12.5			
		XERA 4530-500 LE	Ice 120 HV V2	24T	Set Rpm	2200	± 12.5			
			Jive 120 HV	22T	Yes @80%	2200	± 12.5			
		Scorpion HK 4525-520	Ice 160 HV V2	23T	Set Rpm	2200	± 12.5			
			Jive 120 HV	21T	Yes @80%	2200	± 12.5			
HARD 3D	12S 4000/5000 min 50C	Scorpion HK 4525-520	Ice 160 HV V2	24T	Set Rpm	2250	± 12.5			
			Jive 120 HV	22T	Yes @80%	2250	± 12.5			
EXTREME	12S 4000/5000 50/70C	Scorpion HK 4530-540	Ice 160 HV V2	24T	Set Rpm	2300	± 12.5			
			Jive 120 HV	22T	Yes @80%	2300	± 12.5			

Note: Although the Goblin can fly at high rpm, for safety reasons we suggest to not exceed 2200 rpm.




MOTOR BELT TENSION

- *Assemble the motor and pinion to its mounting plate.
- *Fit the motor assembly into position.
- *Compress the springs by pushing the motor toward the main shaft.
- *At maximum compression, temporarily tighten one of the slide screws.
- *With the minimum centre distance it is easy to install the belt. First put the belt on the motor pinion.
- *Then put the belt around the big pulley.
- *Rotate the motor several times by hand.
- *Release the screw that locks the slide.
- *The springs keep the belt in tension.
- *Help the springs by pulling the motor slightly.
- *Lock all screws.

Figure 1 shows the motor correctly wired. It is advisable to cover the wire joints between the motor and the ESC with heat shrink tubing.

If you want to see a video of this operation, consult the SAB Heli Division YouTube channel

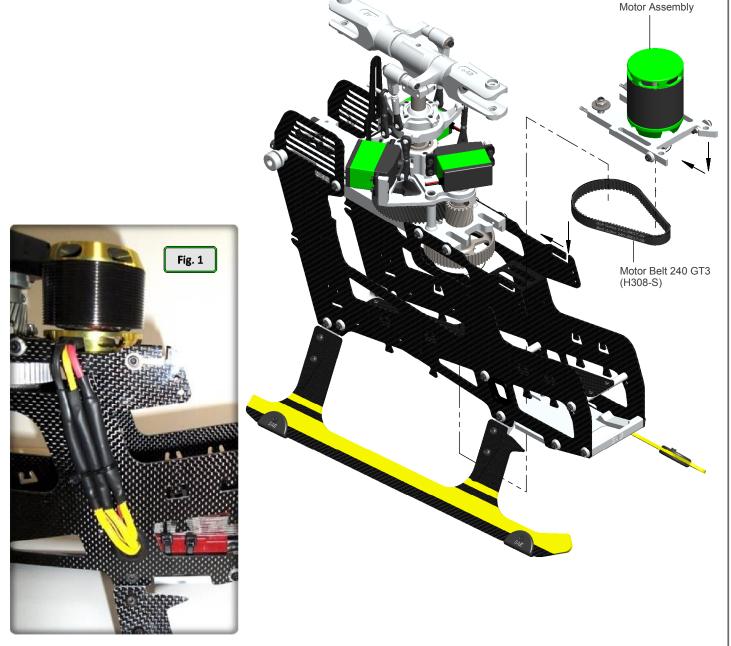



BOOM ASSEMBLY

- *Insert the tail boom assembly making sure that the aluminum part of the tube touches the M3x16 screw.
- *Lock the M8 nuts with the HA005 special tool supplied (Tray 2).
- *Firmly lock the lateral M3 nuts.
- *Assemble the H0038 carbon security plate .
- *Connect the tail servo wire to the previously fitted extension lead.







TAIL BELT TENSION

- *Check the proper assembly of the tail boom.
- *Check that the aluminum part of the tube is against the M3 stop screw.
- *Loosen the tail group by loosening the 4 M3 screws.
- *Install the belt onto the pulley, taking care to respect the direction of rotation (figure 1).
- *Rotate the tail drive several times by hand.
- *Load the spring by rotating the tensioning arm **270°** clockwise (when looking down from the top of the helicopter).
- *Tension the boom until the tensioning arm is aligned with the frame.
- *Tighten the 4 screws.
- *Check that the tail output shaft is perpendicular to the tube. (figure 2)
- *In **figure 3,4,**5 you can see the three conditions, ok, too loose and too tight.

NOTE. To disassemble the tail boom it is possible to remove the pulley H0016-S without loosening the tail unit. Remove the locking screw and pull down.

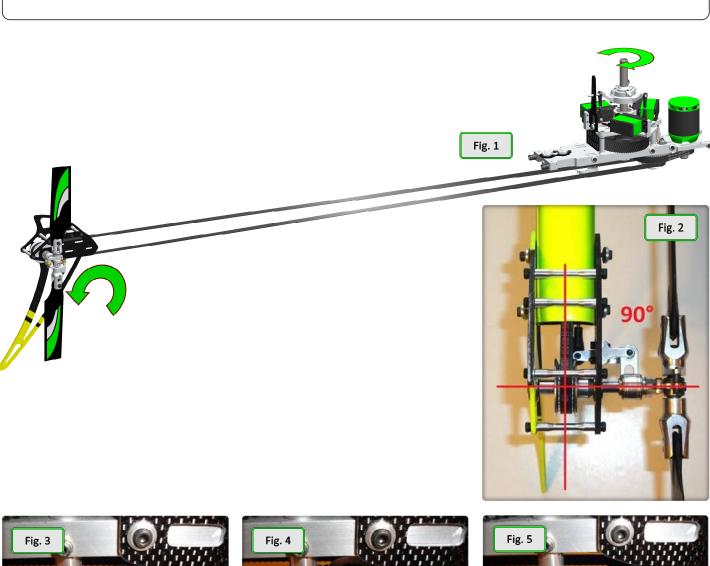

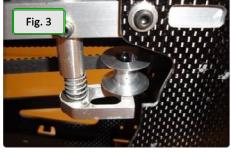









RATTERIES

To secure the batteries, use the supplied O-rings **HA012** [Bag 14]. Install them as shown in figure 1

To correctly secure the batteries it is necessary to use hook and loop type tape on the battery support and batteries themselves (figure 2).

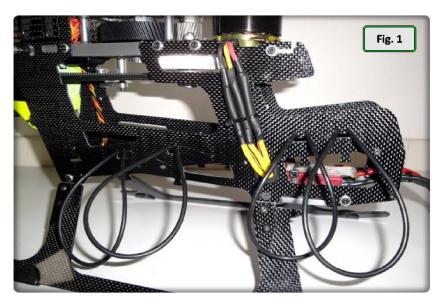

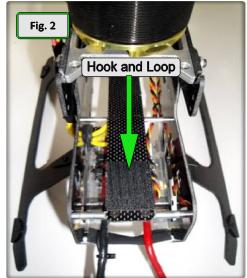

CANOPY

On the Goblin, the canopy touches the frame. To avoid triggering vibration, it is necessary to attach an adhesive foam tape to the canopy **HA006** [Bag 14] (figure 3).

The canopy is locked at the point shown in **figure 4** and with two H0036 knobs (both equipped with OR **HA008** [Bag 14](**figure 5**)). Confirm the canopy is secure prior to each flight.










OPERATIONS BEFORE FLIGHT

- *Set up the remote control and the flybarless system with utmost care.
- *It is advisable to test the correct settings of the remote and flybarless system without main blades or tail blades fitted.
- *Check that all wiring is isolated from the carbon/aluminum parts. It is good practice to protect them at the points where they are at most risk.
- *Be sure of the gear ratio, verifying carefully the motor pulley in use. The forces acting on the mechanics increase enormously with increasing of rpm. Although the Goblin can fly at high rpm, for safety reasons we suggest to not exceed 2200 rpm.
- *Check the correct tension of the tail belt through the belt tensioner.
- *Fit the main blades and tail blades. (Fig.1 and Fig.2)
- *Please make sure the main blades are tight on the blade grips, you should be able to violently jerk the head in both directions and the blades should not fold. Failure to tighten the blades properly can result in a boom strike. To fold the blades for storage, it is advisable to loosen them.
- *Check the collective and cyclic pitch. For 3D flight, set about +/- 12°-13°.
- *It is important to check the correct tracking of the main blades.
- *On the Goblin, in order to correct the tracking, adjust the main link rod as shown in figure 3. This is provided with a right/left thread system that allows continuous fine adjustments of the length of the control rod; for this adjustment it is not necessary to detach the ball link.



*Perform the first flight at a low headspeed, 1700/1800 RPM.

After this first flight, do a general check of the helicopter. Verify that all screws are correctly tightened.

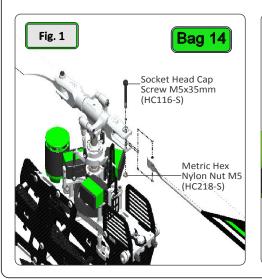





IN FLIGHT

During its first flights the Goblin has to be "run in".

The Damper, the main gear, the uniball and other parts must undergo some slight wear to operate smoothly. It is likely that during the very first flights the model may exhibit a swaying phenomena, particularly at low head speed. This phenomena disappears after a few flights.

If you want to fly in a generic way, using both low headspeed and high headspeed, the standard setting is the best compromise.

However, if you prefer flying at low speed [< 2000 rpm], for best results we recommend changing the tail pulley for a smaller one to increase tail rotor rpm. In this way, you will have extremely precise tail control even at low RPM. This pulley is available in the upgrade list [H0103-S]

It is important to check the rigidity of the head dampening frequently. This can be adjusted by adding or removing shims to preload the dampers. If you notice a loss of head stiffness over time, add a 0.2 mm shim to each side (HC232-S). It is extremely important that the blade grips do not have sideways play in the head, the head is already assembled and preloaded with 2 shims, if needed you can find two extra shims in the box [HC232 - Bag 14].



MAINTENANCE


- *On the Goblin, areas to look for wear include:
 - Motor belt
 - * Tail belt
 - * Damper
 - * Main gear and pinion


The lifespan of these components varies according to the type of flying. On average it is recommended to replace these special parts every **100** flights.

- *The head tends to lose rigidity after a while. Check this condition every **20** flights. Preloading with precision shim washers, it is possible to vary the rigidity of the head.
- *Check all uniballs often.
- *Check the head control linkages at the thread between the two aluminum parts (figure 1). The play present in this coupling is desired. Check after each flight that the play remains constant.
- *The most stressed bearings are definitely those of the tail shaft. Check them frequently. All other parts are not particularly subject to wear.
- *Periodically lubricate the tail slide movement and its linkages as well as the swashplate movement and its linkages.
- *Lubricate the main gear with silicone and Tri-Flow Synthetic grease, even though the gear is made of technopolymer, a high mineral based filler, it still requires some lubrication.
- *Check the screws that are highlighted in the following images frequently, make sure you remain tight (fig.2 and fig.3).
- *To ensure safety you should do a general inspection of the helicopter after each flight. You should check:
 - * The maintenance of proper belt tension.
 - * The proper isolation of wires from the carbon and aluminum parts.
 - * That all screws remain tight.






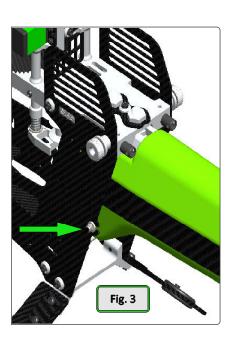

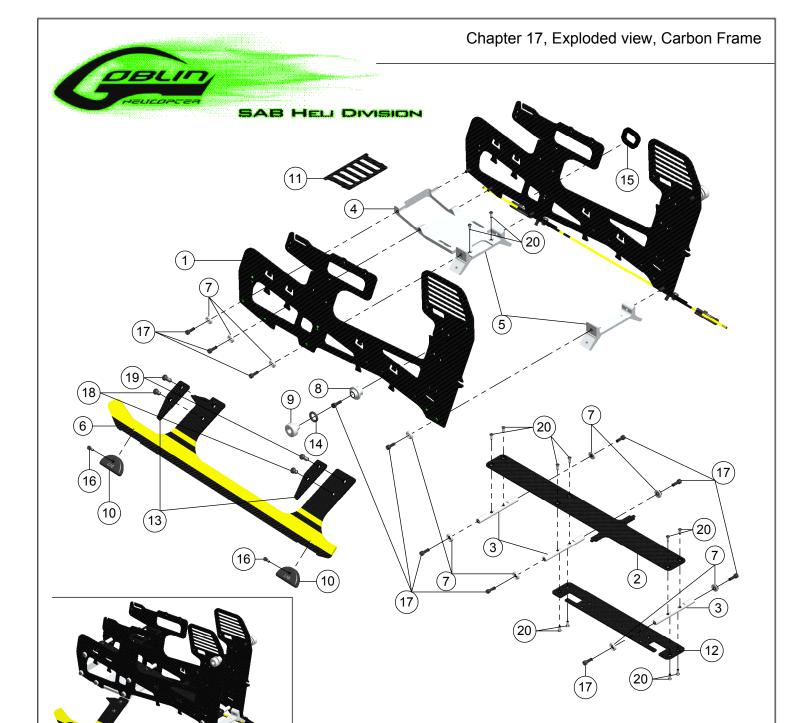


Main Frame				
POS	COD	Name	Specification	Quantity
1	H0001	Main Frames	Carbon Fiber	2
2	H0002	Battery Tray	Carbon Fiber	1
3	H0003	Frame Spacers	Aluminum	3
4	H0004	ESC Support	Aluminum	1
5	H0005	Landing Gear Supports	Aluminum	2
6	H0105	Yellow Landing Gears	Carbon Fiber	2
7	H0007	Finishing Washers M3	Aluminum	20
8	H0008	Canopy Positioners	Aluminum	2
9	H0036	Canopy Lockings	Aluminum	2
10	H0039	Landing Gear Protection	Plastic	4

	Main Frame			
POS	COD	Name	Specification	Quantity
11	H0042	Battery Protection	Carbon Fiber	1
12	H0073	Battery Support	Carbon Fiber	1
13	H0074	Landing Gear Struts	Carbon Fiber	4
14	HA008	Canopy ORs	Oring 3030	2
15	HA010	Cable Pass	Ø 16 x Ø 24 x 2mm	1
16	HC018	Socket Head Cap Screws M2.5 x 6mm		4
17	HC050	Socket Head Cap Screws	M3 x 8mm	22
18	HC096	Button Head Cap Screws	M4 x 6mm	4
19	HC100	Button Head Cap Screws	M4 x 10mm	4
20	HC128	Flat Head Cap Screws	M2.5 x 5mm	12

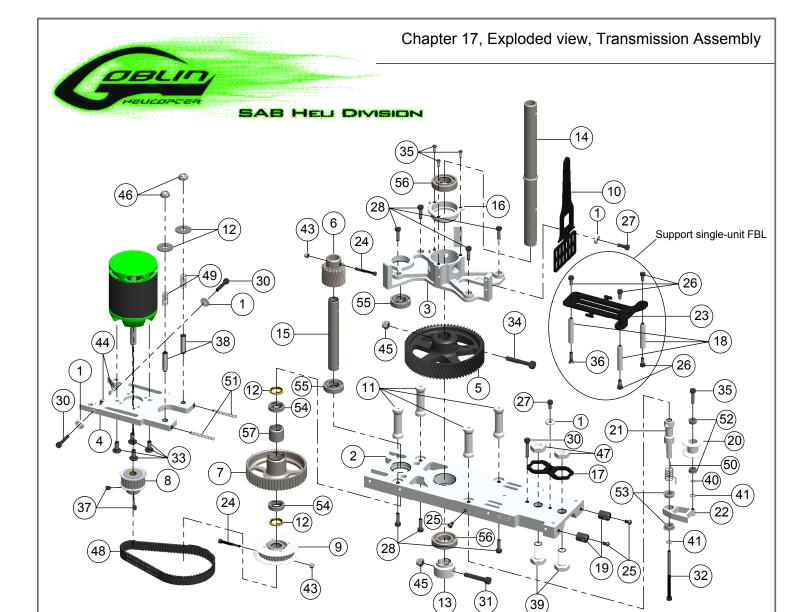

TRANSMISSION ASSEMBLY				
POS	COD	Name	Specification	Quantity
1	H0007	Finishing Washers M3	Aluminum	4
2	H0009	Main Structure	Aluminum	1
3	H0010	Servo Support	Aluminum	1
4	H0011	Motor Support	Aluminum	1
5	H0012	Main Gear	68T M1	1
6	H0125	Drive Pinion	20T M1	1
7	H0104	Pulley	60T	1
8	H0015-21	Pulley	21T	1
9	H0101	Pulley	37T	1
10	H0017	Swash plate Anti-Rotation Guide	Carbon Fiber	1
11	H0018	Columns	Aluminum	4
12	H0110	Bush-One Ways	Ø10 x Ø13 x 1.4mm	2
13	H0121	M4 Locking Collar		1
14	H0122	Main Shaft		1
15	H0022	Tail Shaft		1
16	H0024	Main Shaft Bearing Support		1
17	H0038	Safety Locking Tail Boom	Carbon Fiber	1
18	H0043	Spacers Flybarless		3
19	H0050	Antenna Guide	Plastic	2
20	H0069	Tail Belt Idler		1
21	H0070	Belt Tensioner Support		1
22	H0071	Belt Tensioner Arm		1
23	H0077	Flybarless Support	Carbon Fiber	1
24	HC033	Socket Head Cap Screw Shouldereds	M2.5 x 19mm	2
25	HC038	Button Head Cap Screws	M3 x 4mm	3
26	HC044	Socket Head Cap Screws	M3 x 6mm	5
27	HC050	Socket Head Cap Screws	M3 x 8mm	2
28	HC056	Socket Head Cap Screws	M3 x 10mm	7
29	HC062	Socket Head Cap Screw	M3 x 12mm	1

	TRANSMISSION ASSEMBLY			
POS	COD	Name	Specification	Quantity
30	HC068	Socket Head Cap Screws	M3 x 16mm	3
31	HC104	Socket Head Cap Screw	M4 x 22mm	1
32	HC092	Socket Head Cap Screw	M3 x 50mm	1
33	HC098	Button Head Cap Screws	M4 x 8mm	4
34	HC110	Socket Head Cap Screw	M4 x 25mm	1
35	HC128	Flat Head Cap Screws	M2.5 x 5mm	3
36	HC134	Flat Head Cap Screw	M3 x 8mm	1
37	HC152	Set Screws	M4 x 4mm	2
38	HC158	Set Screws	M5 x 20mm	2
39	HC164	Vite Nylon Esa	M8 x 14mm	2
40	HC176	Washer	Ø3 x Ø4x0.5mm	1
41	HC180	Washers	Ø3.2 x Ø6 x 0.5mm	2
42	HC188	Washers	Ø5.3 x Ø 15 x 1mm	2
43	HC200	Metric Hex Nylon Nuts	M2.5 H3.5mm	2
44	HC206	Metric Hex Nylon Nuts	M3 H4mm	2
45	HC212	Metric Hex Nylon Nuts	M4 H5mm	2
46	HC218	Metric Hex Nylon Nuts	M5 H4.8mm	2
47	HC224	Metric Hex Nuts Low	M8 H6.5mm	2
48	HC308	Belt Gates	240-3MGT-13	1
49	HC310	Springs	De 5.8-df0.3-LL9	2
50	HC312	Spring	De 8-df0.5-LL8	1
51	HC314	Springs	De 8-df0.5-LL12	2
52	HC402	Flanged Bearings	Ø3 x Ø7 x 3mm	2
53	HC410	Flanged Bearings	Ø5 x Ø9 x 3mm	2
54	HC420	Bearings	Ø10 x Ø15 x 4mm	2
55	HC422	Bearings	Ø 10 x Ø 19 x 5mm	2
56	HC426	Bearings	Ø12 x Ø24 x 6mm	2
57	HC442	One Way Bearing	Ø10 x Ø14 x 12mm	1

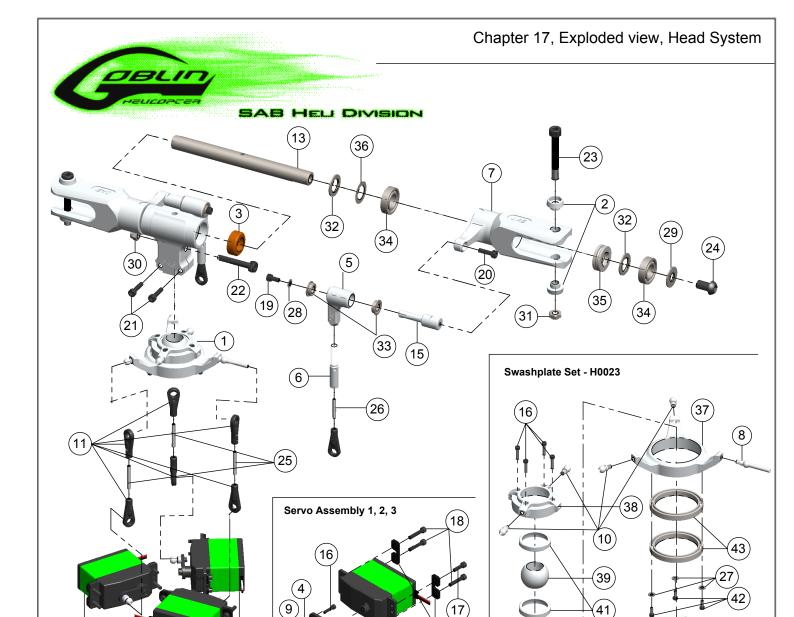


Head System				
POS	COD	Name Specification		Quantity
1	H0023	Swashplate Set		1
2	H0025	Locking Nut Main Blade Grips	Aluminum	4
3	H0027	Damper Hards		2
4	H0031	Uniball Spacers		3
5	H0032	Blade Grip Links	Aluminum	2
6	H0033	Main Linkages	Aluminum	2
7	H0034	Main Blade Grips	Aluminum	2
8	H0063	Uniball	M3 x 4 Ø 5 H18	1
9	H0064	Uniballs	M2.5 Ø 5 H6	3
10	H0065	Uniballs	M3 x 4 Ø 5 H3	4
11	H0066	Plastic Ball Linkages	Plastic	8
12	H0075	Servo Spacers	Carbon Fiber	6
13	H0079	Spindle		1
14	H0080	Center Hub	Aluminum	1
15	H0081	Center Hub Grip Links	Aluminum	2
16	HC008	Socket Head Cap Screws	M2 x 8mm	7
17	HC020	Socket Head Cap Screws	M2.5 x 8mm	3
18	HC026	Socket Head Cap Screws	M2.5 x 12mm	9
19	HC044	Socket Head Cap Screws	M3 x 6mm	4
20	HC056	Socket Head Cap Screws	M3 x 10mm	2
21	HC062	Socket Head Cap Screws	M3 x 12mm	2
22	HC104	Socket Head Cap Screw	M4 x 22mm	1

Servo Assembly 3

Servo Assembly 2


Servo Assembly 1

Head System				
POS	COD	Name	Specification	Quantity
23	HC116	Socket Head Cap Screw Shouldereds M5 x 35mm		2
24	HC122	utton Head Cap Screws M6 x 10mm		2
25	HC140	Set Screws	et Screws M2.5 x 18mm	
26	HC146	Set Screws	M2.5 x 15mm	2
27	HC170	Washers	Ø2 x Ø5 x 0.5mm	3
28	HC180	Washers	Ø3 x Ø6 x 0.5mm	2
29	HC194	Washers	Ø6 x Ø 14 x 1.5mm	2
30	HC212	Metric Hex Nylon Nut	M4 H5	1
31	HC218	Metric Hex Nylon Nuts	M5 H4.8	2
32	HC230	Washers	Ø10 x Ø16 x 1mm	4
33	HC410	Flanged Bearings Ø5 x Ø9 x 3mm		4
34	HC422	Bearings		4
35	HC438	Thrust Bearings	Ø10 x Ø18 x 5.5mm	2
36	HC232	Washers	Ø10 x Ø16 x 0.2mm	2
37	H0023-01	Swashplate 01		1
38	H0023-02	Swashplate 02		1
39	H0023-03	Swashplate 03		1
40	H0023-04	Swashplate 04		2
41	H0023-05	Swashplate 05		1
42	HC002	Socket Head Cap Screws	M2 x 5mm	3
43	HC430	Bearing Rads	Ø30 x Ø37 x 4mm	2

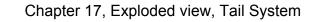



SAB HELI DIVISION

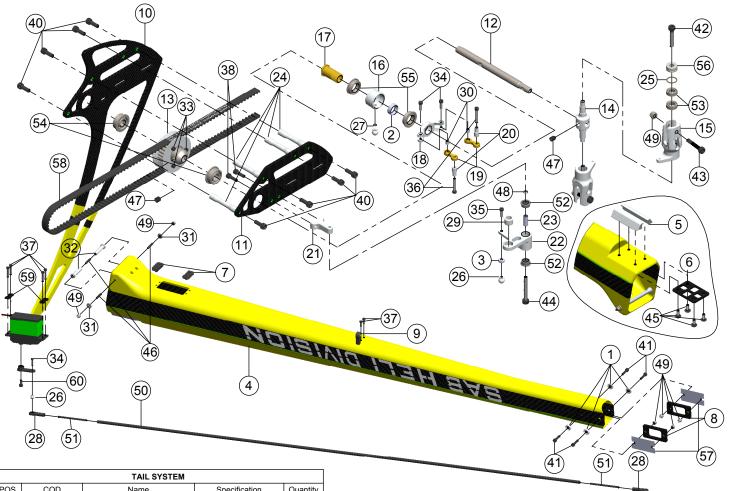


	TAIL SYSTEM				
POS	COD	Name	Specification	Quantity	
1	H0007	Finishing Washer M3	Aluminum	4	
2	H0029	Spacer	Ø8.1 x Ø 9.2 x 3.2mm	1	
3	H0031	Uniball Spacer		1	
4	H0037	Tail Boom	Carbon Fiber	1	
5	H0037-01	Tail Boom Interface	Aluminum	1	
6	H0037-02	Locking Interface	Carbon Fiber	1	
7	H0040	Tail Servo Locks	Plastic	2	
8	H0041	Locking Element Tails	Carbon Fiber	2	
9	H0045	Linkage Tail Support	Plastic	1	
10	H0046	Vertical Fin	Carbon fiber	1	
11	H0047	Tail Side Plate	Carbon fiber	1	
12	H0048	Tail Rotor Shaft		1	
13	H0102	Tail Pulley	27T	1	
14	H0051	Tail Rotor Hub		1	
15	H0052	Tail Blade Grips	Aluminum	2	
16	H0053	Tail Pitch Slider 01		1	
17	H0054	Tail Pitch Slider 02		1	
18	H0055	Tail Pitch Slider 03		1	
19	H0056	Grip Links		2	
20	H0057	Main Grip Link Bushs		2	
21	H0058	Bell Crank Base	Aluminum	1	
22	H0059	Bell Crank Lever	Aluminum	1	
23	H0060	Spacer	Ø3 x Ø4 x 9.6mm	1	
24	H0061	Tail Case Spacers	Aluminum	4	
25	H0062	Spacers	Ø7 x Ø9 x 0.5mm	2	
26	H0064	Uniballs	M2.5 Ø 5 H6	2	
27	H0065	Uniball	M3 x 4 Ø 5 H3	1	
28	H0066	Plastic Ball Links	Plastic	2	
29	H0072	Bush Bell Crank		1	
30	H0076	Grip Link Bushs		2	
31	H0078	Washers	Ø3.1 x Ø 12 x 1.8mm	2	

TAIL SYSTEM				
POS	COD	Name	Specification	Quantity
32	H0082	Boom Spacers		2
33	HC002	Socket Head Cap Screws	cket Head Cap Screws M2 x 5mm	
34	HC004	Socket Head Cap Screws	M2 x 6mm	3
35	HC008	Socket Head Cap Screw	M2 x 8mm	1
36	HC014	Socket Head Cap Screws	M2 x 12mm	2
37	HC018	Socket Head Cap Screws	M2.5 x 6mm	2
38	HC020	Socket Head Cap Screws	M2.5 x 8mm	2
39	HC026	Socket Head Cap Screws	M2.5 x 12mm	4
40	HC050	Socket Head Cap Screws	M3 x 8mm	8
41	HC062	Socket Head Cap Screws	M3 x 12mm	4
42	HC068	Socket Head Cap Screws	M3 x 16mm	2
43	HC074	Socket Head Cap Screw Shouldereds	M3 x 16mm	2
44	HC086	Socket Head Cap Screw	M3 x 22mm	1
45	HC098	Button Head Cap Screws	M4 x 8mm	4
46	HC150	Set Screws M3 x 20mm		3
47	HC152	Set Screws M4 x 4mm		2
48	HC176	Washer	Ø3 x Ø4 x 0.5mm	1
49	HC206	Metric Hex Nylon Nuts	M3	8
50	HC236	Carbon Rod	Ø2.5 x Ø4 x 682mm	1
51	HC242	Threaded Rods	M2.5 x 40mm	2
52	HC402	Flanged Bearings	Ø3 x Ø7 x 3mm	2
53	HC406	Bearings	Ø5 x Ø9 x 3mm	4
54	HC414	Flanged Bearings	Ø6 x Ø 13 x 5mm	2
55	HC418	Flanged Bearings	Ø8 x Ø 12 x 3.5mm	2
56	HC434	Thrust Bearings	Ø4 x Ø9 x 4mm	2
57	HA015	Double-Sided Tapes		2
58	HC304	Belt Gates	2061-3GT-06	1
59	H0075	Servo Spacers	Carbon Fiber	2
60		Screw supplied with Servo		1

Chapter 18, Spare Parts



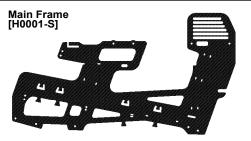

- 1 x CF Main Frame.






1 x CF Battery Tray.6 x Flat Head Cap Screws M2.5x5mm.



- 3 x Frame Spacers.




- 1 x ESC Support. - 2 x Flat Head Cap Screws M2.5x5mm.

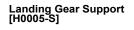



- 1 x Landing Gear Support.



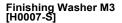



- 10 x Finishing Washers M3.

Canopy Positioner [H0008-S]



- 2 x Canopy Positioners.

Main Structure [H0009-S]



- 1 x Main Structure.

Servo Support [H0010-S]



Motor Support [H0011-S]

- 1 x Motor Support.

- 2 x Set Screws M5x20mm. 2 x Washers 5.3x15x1mm. 2 x Metric Hex Nylon Nuts M5H4.8. 2 x Finishing Washers M3. 2 x Socket Head Cap Screws
- M3x16mm.

 2 x Metric Hex Nylon Nuts M3H4.

 2 x Springs de 5.8/ df0.5 / LL9.

 2 x Springs de 3/ df0.5 / LL12.

68T Main Gear [H0012-S]



- 1 x 68T Main Gear . 1 x Socket Head Cap Screw M4x25mm.
- 1 x Metric Hex Nylon Nut M4 H5.

20T Drive Pinion [H0125-S]



- 1 x 20T Drive Pinion.
- 1 x Socket Head Cap Screw Shouldered M2.5x19mm.
- 1 x Metric Hex Nylon Nut M2.5 H3.5.

60T Pulley [H0104-S]





- 1 x 60T Pulley . 2 x Bush One Ways. 2 x Bearings 10x15x4mm 1 x One Way Bearing 10x14x12mm.

16T Pulley [H0015-16-S]



- 1 x 16T Pulley. - 2 x Set Screws M4x4.

18T Pulley [H0015-18-S]



- 1 x 18T Pulley. - 2 x Set Screws M4x4. - 2 x Set Screws M4x4.

19T Pulley [H0015-19-S]



20T Pulley [H0015-20-S]



- 1 x 20T Pulley. - 2 x Set Screws M4x4.

21T Pulley [H0015-21-S]



- 1 x 21T Pulley. - 2 x Set Screws M4x4.

22T Pulley [H0015-22-S]



- 1 x 22T Pulley. - 2 x Set Screws M4x4.

23T Pulley [H0015-23-S]



- 1 x 23T Pulley. - 2 x Set Screws M4x4.

24T Pulley [H0015-24-S]



- 1 x 24T Pulley. - 2 x Set Screws M4x4.

26T Pulley [H0015-26-S]



- 1 x 26T Pulley. - 2 x Set Screws M4x4.

37T Pulley [H0101-S]



- 1 x Metric Hex Nylon Nut M2.5H3.5

- 1 x 37T Pulley. - 4 x Socket Head Cap Screws M2x8mm - 1 x Socket Head Cap Screw Shouldered M2 5x10mm Shouldered M2 5x19mm

Swashplate Anti-Rotation Guide [H0017-S]



- 1 x CF Swashplate Anti-Rotation Guide.
 1 x Finishing Washer M3.
 1 x Socket Head Cap Screw M3x8mm.



Column [H0018-S]



- 4 x Columns.

M4 Locking Collar [H0121-S]



- 1 x M4 Locking Collar.1 x Socket Head Cap Screw M4x22mm.1 x Metric Hex Nylon Nut M4 H5.

Main Shaft [H0122-S]



- 1 x Main Shaft.
- 1 x Mall ocking Collar 1 x M4 Locking Collar 1 x Socket Head Cap Screws M4x25mm. 2 x Socket Head Cap Screws M4x22mm 3 x Metric Hex Nylon Nuts M4 H5.

Secondary Shaft TH0022-S1 2

- 1 x Secondary Shaft.
 2 x Socket Head Cap Screws Shouldered M2.5x19mm.
 2 x Metric Hex Nylon Nut M2.5 H2.5.

Swashplate [H0023-S]



- 1 x Swashplate Assembly.
- 2 x Bearings 30x Ø37x4mm.
 4 x Uniballs M3x4 Ø5 H3.
- 1 x Uniball M3x4 Ø 5 H18.
- 3 x Socket Head Cap Screws M2x5mm. 4 x Socket Head Cap Screws M2x8mm.

Bearing Support [H0024-S]



- 1 x Bearing Support.
 1 x Bearing Ø12xØ24x6mm.
 3 x Flat Head Cap Screws M2.5x5mm.

Center Hub [H0080-S]



- 1 x Center Hub.
- 1 x Socket Head Cap Screw M4x22mm.
 1 x Metric Hex Nylon Nut M4 H5..
- 2 x Socket Head Cap Screws M3x12mm.

Damper [H0027-S]



- 2 x Dampers
- 2 x Shims Ø10x Ø16x1mm. 2 x Shims Ø10x Ø16x0.2mm.

Spindle [H0079-S]



- 1 x Spindle.2 x Button Head Cap Screws M6x10mm.
- 2 x Washers Ø6x Ø14x1mm.

Blade Grip Arm [H0032-S]



- 2 x Blade Grip Arms.
 4 x Flange Bearings Ø 5x Ø 9x3mm (MF95ZZ).

Main Linkage [H0033-S]



- 2 x Main Linkages.2 x Plastic Balls Link.2 x Set Screws M2.5x15mm.

Blade Grip [H0034-S]



- 1 x Blade Grip.2 x Bush Blade Grips.

Center Blade Grip Arm [H0081-S]



- 2 x Center Blade Grip Arms.
 2 x Socket Head Cap Screws M3x6mm.
 2 x Socket Head Cap Screws M3x10mm.
 2 x Washers \$\phi 3.2x \phi 6x0.5mm

Canopy Locking [H0036-S]



- 2 x Canopy Lockings.2 x Canopy ORs.

Safety Lock Tail Boom [H0038-S]



- 1 x Safety Lock Tail Boom.
- 1 x Finishing Washer M3.
 1 x Socket Head Cap Screw M3x8mm.

Tail Boom [H0037-S]



- x Tail Boom.

- 1 x Tail Boom.
 1 x Tail Boom Interface.
 1 x Locking Interface.
 2 x Tube Spacers.
 2 x Locking Element Tails.
 4 x Button Head Cap Screws M4x8mm.
- 3 x Set Screws M3x20mm.
 2 x Washers Ø3.1xØ12x1.8mm.
 2 x Metric Hex Nylon Nuts M3 H4.
- 2 x Vite Nylon Esa M8x14mm.
 2 x Metric Hex Nuts M8 H6.5.
- 2 x Double Sided Tapes.



NGIBINIO IJEH BA

Locking Element Tail [H0041-S]



Sliding Landing Gear [H0039-S]



4 x Sliding Landing Gears.
 4 x Socket Head Cap Screws M2.5x6mm.

Tail Servo Lock [H0040-S]



- 2 x Tail Servo Locks.2 x Servo Spacers.4 x Socket Head Cap Screws
- M2.5x12mm.

Battery Protection [H0042-S]



1 x Battery Protection.

SAB HELI DIVISION :



Spacer Flybarless [H0043-S]



- 3 x Spacer Flybarless.
 1 x Supporto Flybarless.
 1 x Flat Head Cap Screw M3x8mm.
 5 x Socket Head Cap Screws M3x6mm.

Linkage Tail Support [H0045-S]



- 1 x Linkage Tail Support.
 2 x Socket Head Cap Screws M2.5x6mm.
- Vertical Fin [H0046-S]



- 1 x Vertical Fin.
 2 x Socket Head Cap Screws M3x12mm.
 2 x Finishing Washers M3.

Tail Side Plate [H0047-S]

- 1 x Tail Side Plate.
- 2 x Socket Head Cap Screws M3x12mm.
 2 x Finishing Washers M3.



- 1 x Tail Rotor Shaft.
- 2 x Set Screws M4x4mm.

26T Tail Pulley [H0103-S]



- 1 x 26T Tail Pulley.
- 1 x Set Screw M4x4mm. 6 x Socket Head Cap Screws M2x5mm.

27T Tail Pulley [H0102-S]



- 1 x 27T Tail Pulley.
- 1 x Set Screw M4x4mm. 6 x Socket Head Cap Screws M2x5mm.

Antenna Guide [H0050-S]



2 x Antenna Guide.2 x Button Head Cap Screws M3x4mm.

Tail Rotor Hub [H0051-S]



- 1 x Tail Rotor Hub.
- 1 x Set Screw M4x4mm.2 x Socket Head Cap Screws M3x16mm.

Tail Blade Grip [H0052-S]



- 2 x Tail Blade Grips.2 x Socket Head Cap Screws
- M3x16mm
- 4 x Bearings Ø5x Ø9x3mm.

Tail Pitch Slider [H0053-S]



- 1 x Tail Pitch Slider 01. 1 x Tail Pitch Slider 02. 1 x Tail Pitch Slider 03. 1 x Spacer \$\phi 8x \phi 9x3.2mm. 1 x Uniball M3x4 \$\phi\$5H3.
- 2 x Flanged Bearings Ø8x Ø12x3.5mm

Grip Link [H0056-S]



- 2 x Grips Link.
 2 x Main Grip Link Bush.
 2 x Grip Link Bush.
 2 x Socket Head Cap Screws M2x12mm. - 2 x Socket Head Cap Screws

Bell Crank Base [H0058-S]



- 1 x Bell Crank Base.

Bell Crank Lever [H0059-S]



- 1 x Bell Crank Lever.

- 1 x Bush Bell Crank. 1 x Washer Ø3xØ4x0.5mm. 1 x SpacerØ3xØ4x9.6mm. 1 x Socket Head Cap Screw M3x22mm. 2 x Flanged Bearings Ø3xØ7x3mm.

Tail Case Spacer [H0061-S]



- 2 x Tail Case Spacers.
 4 x Socket Head Cap Screws M3x8mm.

Spacer ϕ 7x ϕ 9x0.5mm [H0062-S]



- 4 x Spacers Ø 3x Ø 4x0.5mm

Uniball M3x4 Ø 5H18 [H0063-S]



- 1 x Uniball M3x4 Ø5H18

Uniball M2 Ø 5H6 [H0064-S]

- 5 x Uniballs M2 Ø 5H6.

RX Battery Support [H0073-S]

1 x RX Battery Support.
 4 x Flat Head Cap Screws M2.5x5mm.

- 5 x Unibalis Spacers. 5 x Oscket Head Cap Screws M2x8mm. 5 x Socket Head Cap Screws M2x6mm.

Uniball M3x4 Ø 5H3 [H0065-S]



Landing Gear Struts [H0074-S]

alalalal

- 4 x Landing Gear Struts. - 4 x Button Head Cap

Screws M4x6mm. - 4 x Button Head Cap Screws M4x10mm.

- 5 x Uniballs M3x4 Ø 5H3.5.

Plastic Ball Link [H0066-S]



- 10 x Plastic Ball Links

Belt Tensioner Support [H0070-S]



- 1 x Belt Tensioner Support.1 x Tail Belt Idler.

- 1 x Tail Belt Idel: 1 x Belt Tensioner Arm. 2 x Flanged Bearings Ø3xØ7x3mm. 2 x Flanged Bearings Ø5xØ9x3mm. 1 x Socket Head Cap Screw M3x50mm. 1 x Washer Ø3xØ4x0.5mm.
- 1 x Washer Ø 3x Ø 4x0.5film. 1 x Socket Head Cap Screw M3x12mm. 2 x Washers Ø 3.2x Ø 6x0.5mm. 1 x Button Head Cap Screw M3x4mm. 1 x Spring De8/df0.5/LL8.

-10 x Servo Spacers.

Servo Spacer [H0075-S]

Washer \emptyset 3.1x \emptyset 12x1.8mm [H0078-S]



10 x Washers Ø 3.1x Ø 12x1.8mm.


SAB HELI DIVISION

Copyright@2012 - SAB Heli Division - All rights reserved





-10 x Socket Head Cap Screws M2x5mm.

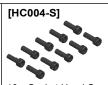

-10 x Socket Head Cap Screws M2x6mm.



-10 x Socket Head Cap Screws M2x8mm.



-10 x Socket Head Cap Screws M2x12mm.



-10 x Socket Head Cap Screws M2.5x6mm.



Screws M2.5x8mm.



-10 x Socket Head Cap Screws M2.5x12mm



 4 x Socket Head Cap Screw Shouldereds M2.5x19mm.
 4 x Metric Hex Nylon Nuts M2.5H3.5.



- 5 x Button Head Cap Screws M3x4mm.



-10 x Socket Head Cap Screws M3x6mm.



-10 x Socket Head Cap Screws M3x8mm.



-10 x Socket Head Cap Screws M3x10mm.



-10 x Socket Head Cap Screws M3x12mm.



-10 x Socket Head Cap Screws M3x16mm.



-2 x Socket Head Cap Screw Shouldereds M3x16mm.
 -2 x Metric Hex Nylon Nuts M3H4.



-5 x Socket Head Cap Screws M3x22mm.



-2 x Socket Head Cap Screw Shouldereds M3x50mm.



-10 x Button Head Cap Screws M4x6mm.



-10 x Button Head Cap Screws M4x8mm.



-10 x Button Head Cap Screws M4x10mm.



-10 x Socket Head Cap Screws M4x22mm.



-10 x Socket Head Cap Screw s M4x25mm.



2 x Socket Head Cap Screw Shouldereds M5x34mm.
 2 x Metric Hex Nylon Nuts



-10 x Button Head Cap Screws M6x10mm.

[HC128-S]



-5 x Flat Head Cap Screws M2.5x5mm.

[HC134-S]



-5 x Flat Head Cap Screws M3x8mm.

[HC140-S]



- 10 x Set Screw M2.5x18mm.

[HC146-S]



- 10 x Set Screws M2.5x15mm.

[HC150-S]



- 10 x Set Screws M3x20mm.



- 10 x Set Screws M4x4mm.



- 5 x Set Screws M5x20mm.

[HC164-S]



5 x Vite Nylon Esa Cap M8x14mm.

[HC170-S]



- 10 x Washers \emptyset 2.2x \emptyset 5x0.3mm.

[HC176-S]



 5 x Washers \emptyset 3x \emptyset 4x0.5mm.

[HC180-S]



- 10 x Washers Ø 3.3x Ø 6x0.5mm.

[HC182-S]



- 10 x Washers Ø 3.3x Ø 9x0.8mm.

[HC188-S]



- 5 x Washers ∅5.3x ∅ 15x1mm.

[HC194-S]



5 x Washers Ø6x Ø14x1.5mm.

[HC200-S]



- 10 x Metric Hex Nylon Nuts M2.5H3.5. - 10 x Metric Hex Nylon Nuts M3H4.

[HC206-S]



[HC212-S]



- 10 x Metric Hex Nylon Nuts M4 H5.



[HC218-S]

- 5 x Metric Hex Nylon Nuts M5 H4.8.

[HC224-S]



- 5 x Metric Hex Nuts M8 H6.5.

[HC230-S]



- 5 x Shim Washers Ø10xØ16x1mm.

[HC232-S]



- 5 x Shim Washers Ø 10x Ø 16x0.2mm.


[HC234-S]




- 5 x Shim Washers Ø10x Ø16x0.1mm.

SAB HELI DIVISION




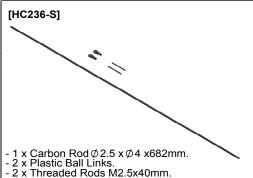


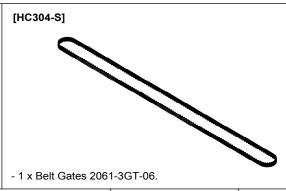




- 1 x Belt Gates 240-3MGT-13.

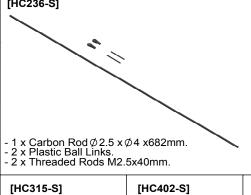

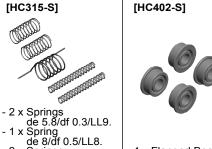





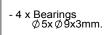

[HC410-S]



2 x Flanged Bearings
 Ø6x Ø13x5mm.



- 2 x Flanged Bearings Ø8x Ø12x3.5mm.



2 x Springs de 3/df 0.5/LL12.















- 1 x One Way Bearing Ø 10x Ø 14x12mm.



- 1 x Foam Blade Holder.



[HA016-S] 1 x Plastic Wrench Nut M8 & M6.



- 1 x Canopy Mousse 80cm.



- 5 x Canopy ORs.




- 1 x Cable Pass.



[HA011-S]

- 2 x Canopy Grommets.

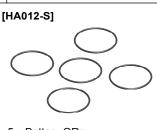

- 5 x Battery ORs.



SAB 690mm Carbon Fiber Main Blade.



SAB 115mm Carbon Fiber Tail Blade



SAB HELI DIVISION

